

Fuse Positions , (L0L)


From January 2011



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

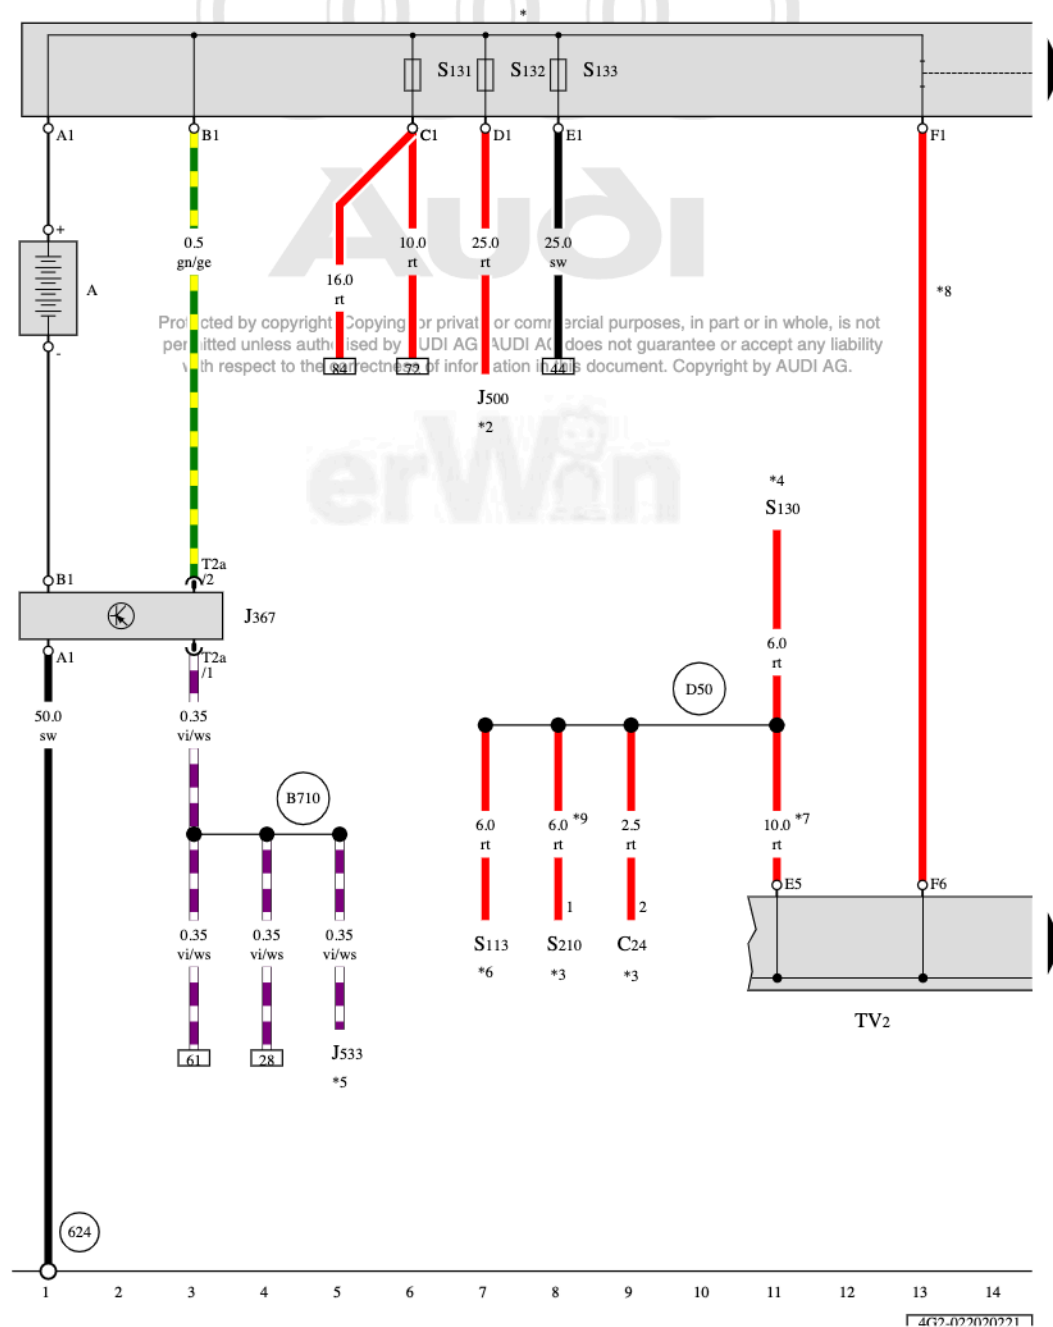

Battery, Battery Monitoring Control Module

- A Battery
- C24 Suppressor
- J367 Battery Monitoring Control Module
- J500 Power Steering Control Module
- J533 Data Bus on Board Diagnostic Interface
- S113 Automatic Transmission Control Module Fuse
- S130 Secondary Air Injection Pump Fuse
- S131 Safety Fuse 1
- S132 Safety Fuse 2
- S133 Safety Fuse 3
- S210 Fuse 7 (Terminal 30)
- T2a 2-Pin Connector
- TV2 Terminal 30 Wire Junction

- 624 Ground Connection near Starter Battery
- B710 LIN Bus Connection 5 (in Main Wiring Harness)
- D50 Positive Connection (30) (in Engine/Motor Compartment Wiring Harness)
- * Main Fuse Carrier in the Right Rear Luggage Compartment, at the Battery
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 Refer to Applicable Engine Wiring Diagram
- *4 For Vehicles with Secondary Air Injection Pump
- *5 Refer to Applicable Wiring Diagram for Data Bus Networking
- *6 Refer to Applicable Wiring Diagram for Automatic Transmission (DSG)
- *7 Diameter Depends on Equipment
- *8 Flat Conductor
- *9 For Vehicles with Hybrid Drive

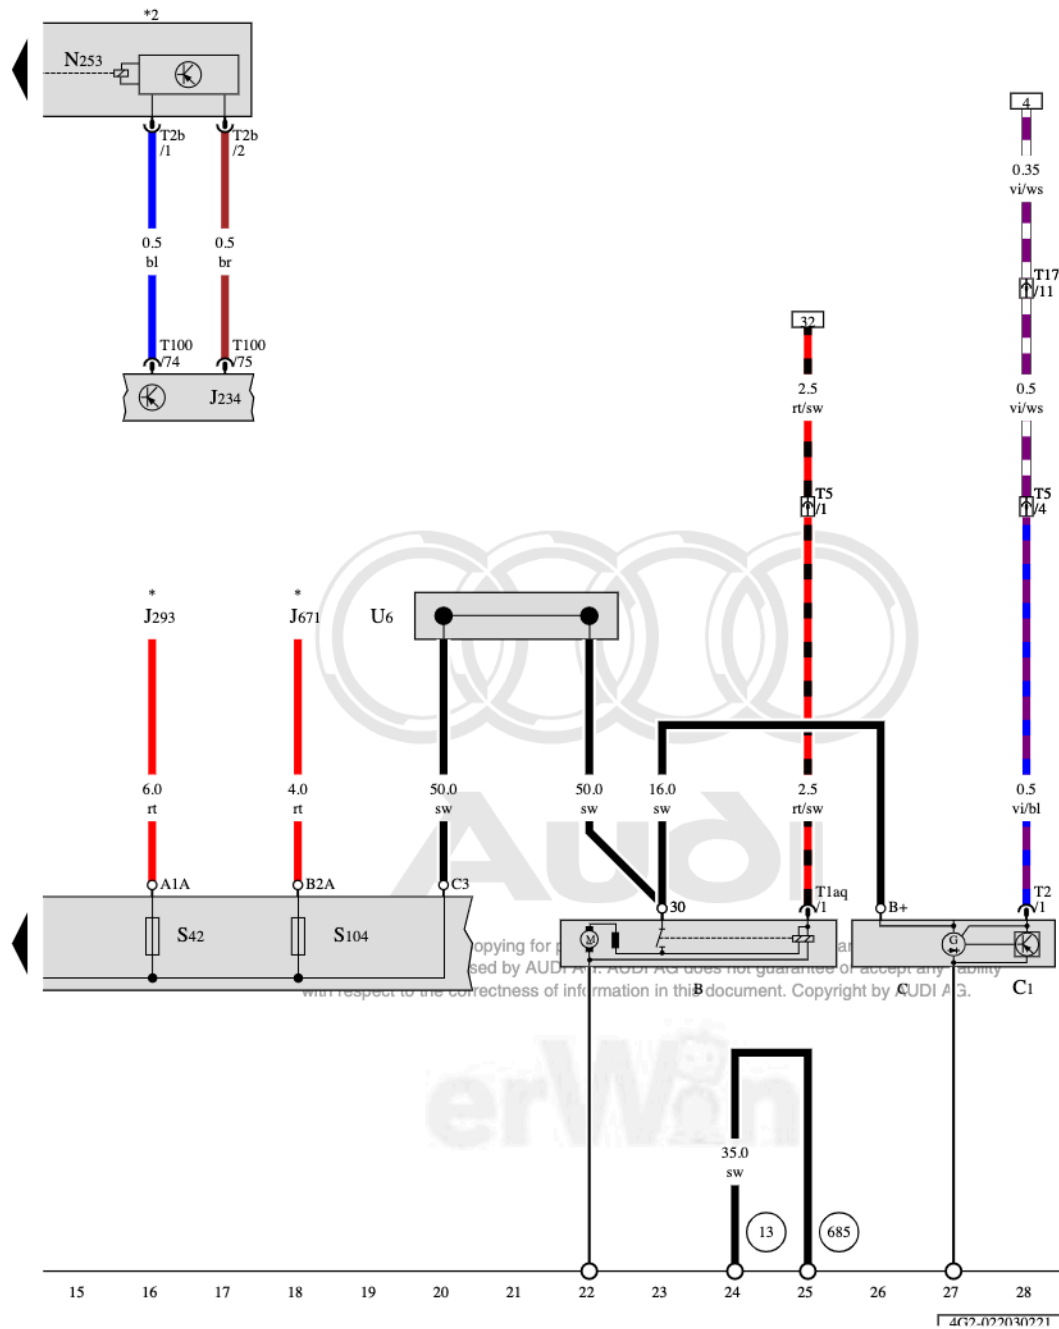


Starter, Generator, Battery Interrupt Igniter, Battery Jump Start Terminal

- B Starter
- C Generator
- C1 Voltage Regulator
- J234 Airbag Control Module
- J293 Radiator Fan Control Module
- J671 Radiator Fan Control Module 2
- N253 Battery Interrupt Igniter
- S42 Radiator Fan Fuse
- S104 Radiator Fan Second Speed Fuse
- T1aq 1-Pin Connector
- T2 2-Pin Connector
- T2b 2-Pin Connector
- T5 5-Pin Connector, In the Center Plenum Chamber
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T100 100-Pin Connector
- U6 Battery Jump Start Terminal
- 13 Ground Connection in Engine/Motor Compartment, Right
- 685 Ground Connection 1 on Right Front Longitudinal Member
- * Refer to Applicable Engine Wiring Diagram
- *2 Main Fuse Carrier in the Right Rear Luggage Compartment, at the Battery


J53 Starter Relay
J623 Engine/Motor Control Module
J695 Starter Relay 2

- | | |
|------|--|
| D35 | Positive Connection 1 (15a) (in Engine Pre-Wiring Harness) |
| D210 | Connection 50 (in Engine/Motor Compartment Wiring Harness) |
| * | Refer to Applicable Engine Wiring Diagram |

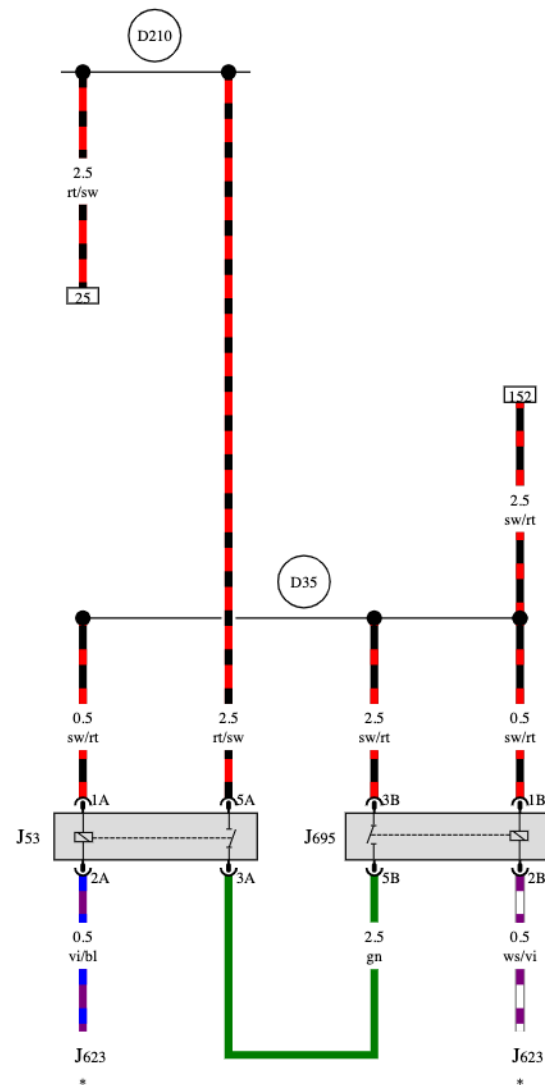

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

| | | |
|----|---|--------|
| ws | = | white |
| sw | = | black |
| ro | = | red |
| rt | = | red |
| br | = | brown |
| gn | = | green |
| bl | = | blue |
| gr | = | grey |
| li | = | lilac |
| vi | = | lilac |
| ge | = | yellow |
| or | = | orange |
| rs | = | pink |

 


Voltage Stabilizer

J532 Voltage Stabilizer
SA9 Fuse 9 (On Fuse Panel A)
T12p 12-Pin Connector
T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station

51 Ground Connection in Luggage Compartment, Right

385 Ground Connection 20 (in Main Wiring Harness)

* For Vehicles with Start/Stop System
*2 Refer to Applicable Engine Wiring Diagram
*3 For Vehicles with 400 W Voltage Stabilizer
*4 Diameter Depends on Equipment

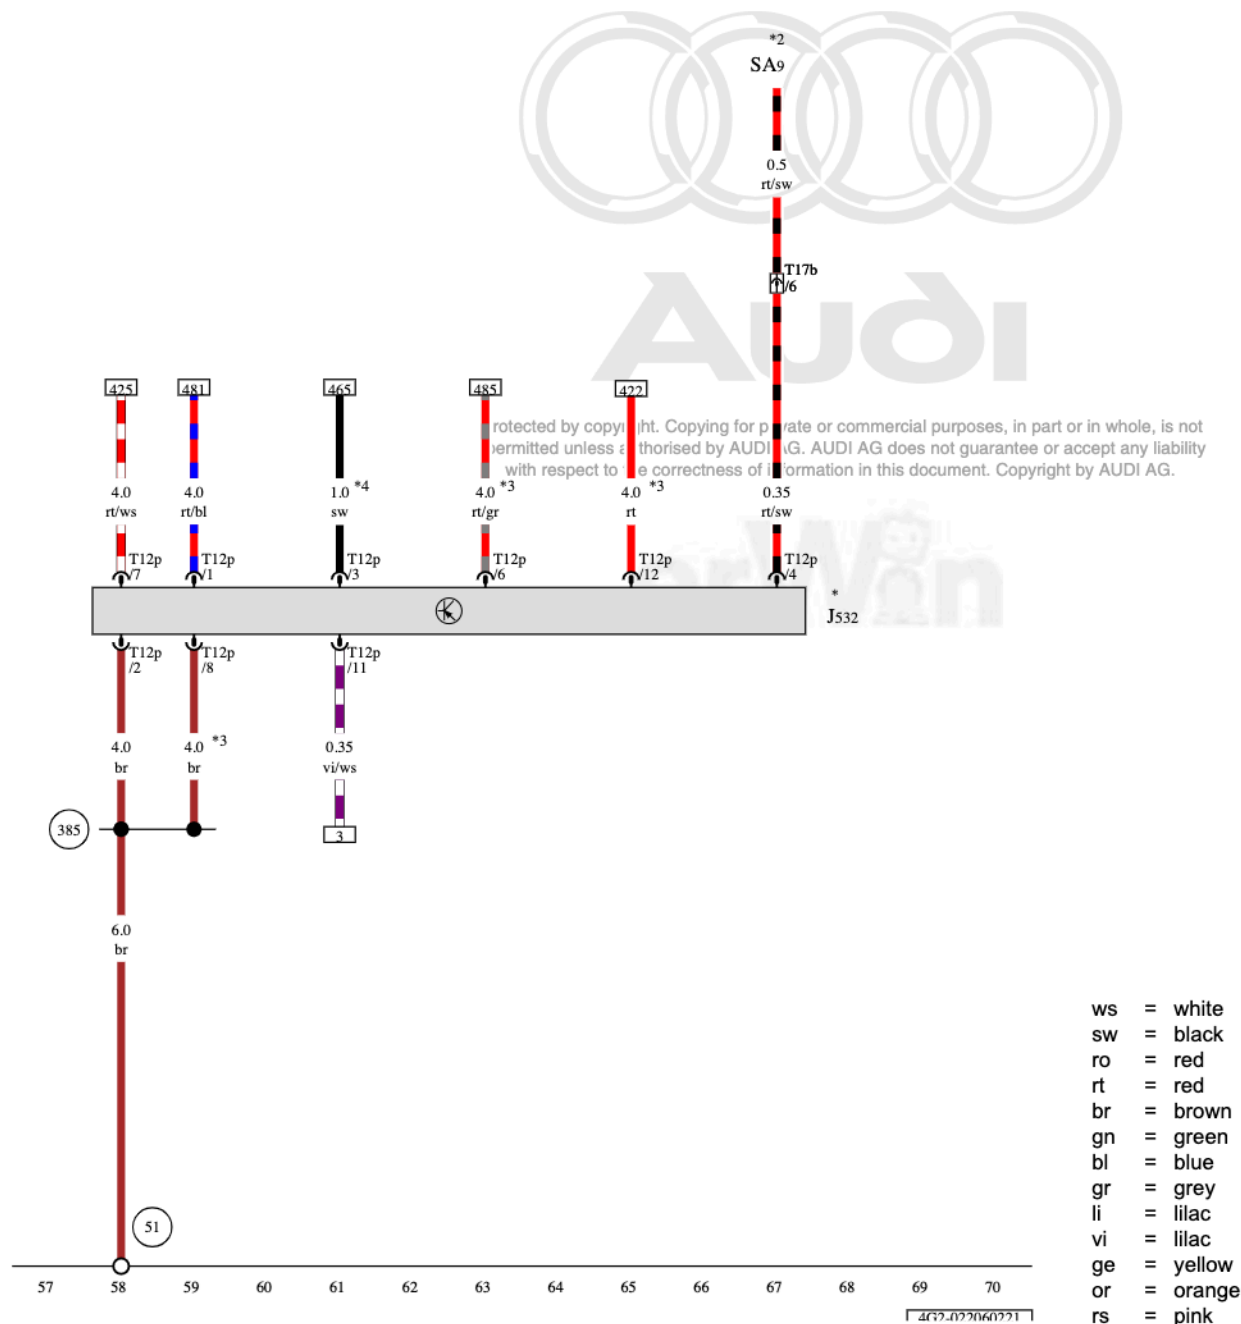

Positive Connection (30) (in Main Wiring Harness),
Positive Connection 2 (30) (in Main Wiring Harness),
Positive Connection 3 (30) (in Main Wiring Harness)

J963 Reducing Agent Metering System Relay


B272 Positive Connection (30) (in Main Wiring Harness)

B298 Positive Connection 2 (30) (in Main Wiring Harness)

B299 Positive Connection 3 (30) (in Main Wiring Harness)

* Refer to Applicable Engine Wiring Diagram

*2 Depending on Equipment

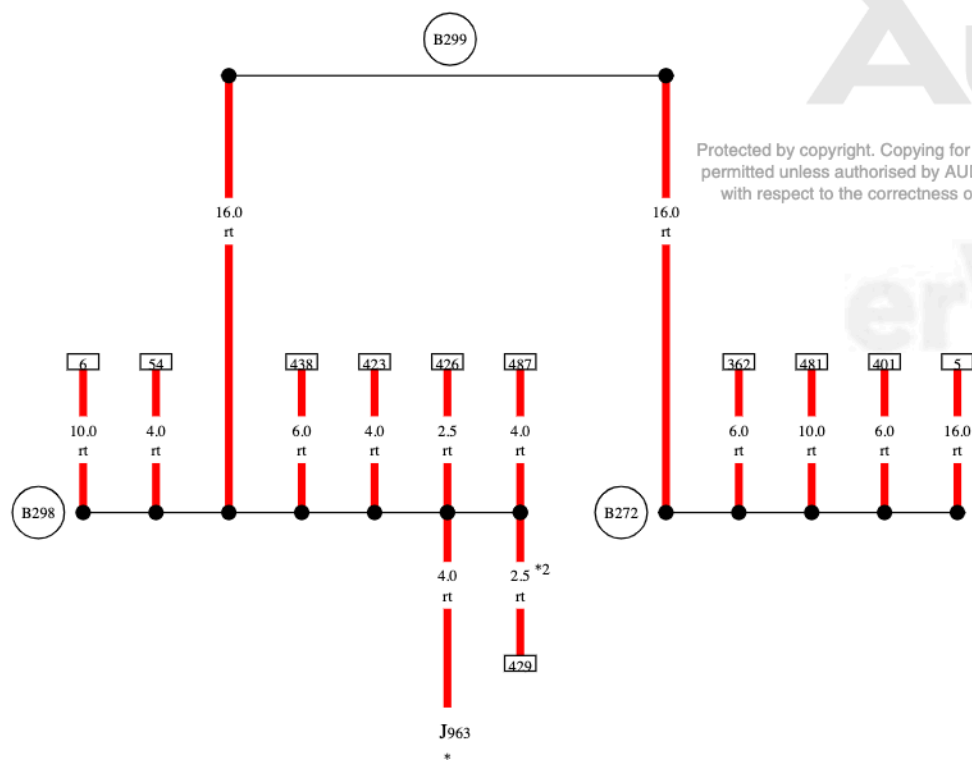

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink


Fuse Panel B, Fuse Panel 1

- E256 ASR/ESP Button
- E499 Multimedia Control Head 2
- E538 Electromechanical Parking Brake Button
- J345 Towing Recognition Control Module
- J500 Power Steering Control Module
- J882 Seat Heating Control Module
- J910 Automatic Dimming Interior Rearview Mirror Relay
- J931 Assembly Mount Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB1 Fuse 1 (On Fuse Panel B)
- SB2 Fuse 2 (On Fuse Panel B)
- T6ai 6-Pin Connector
- T6ak 6-Pin Connector
- T6al 6-Pin Connector, On the Left Front of the Vehicle Floor
- T8a 8-Pin Connector
- T12h 12-Pin Connector
- T12m 12-Pin Connector
- T16d 16-Pin Connector
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- Y7 Automatic Dimming Interior Rearview Mirror

B281 Positive Connection 5 (15a) (in Main Wiring Harness)

B283 Positive Connection 7 (15a) (in Main Wiring Harness)

- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 For Vehicles with Seat Heating
- *3 For Vehicles with Rear Seat Entertainment (RSE) Prep
- *4 Refer to Applicable Engine Wiring Diagram

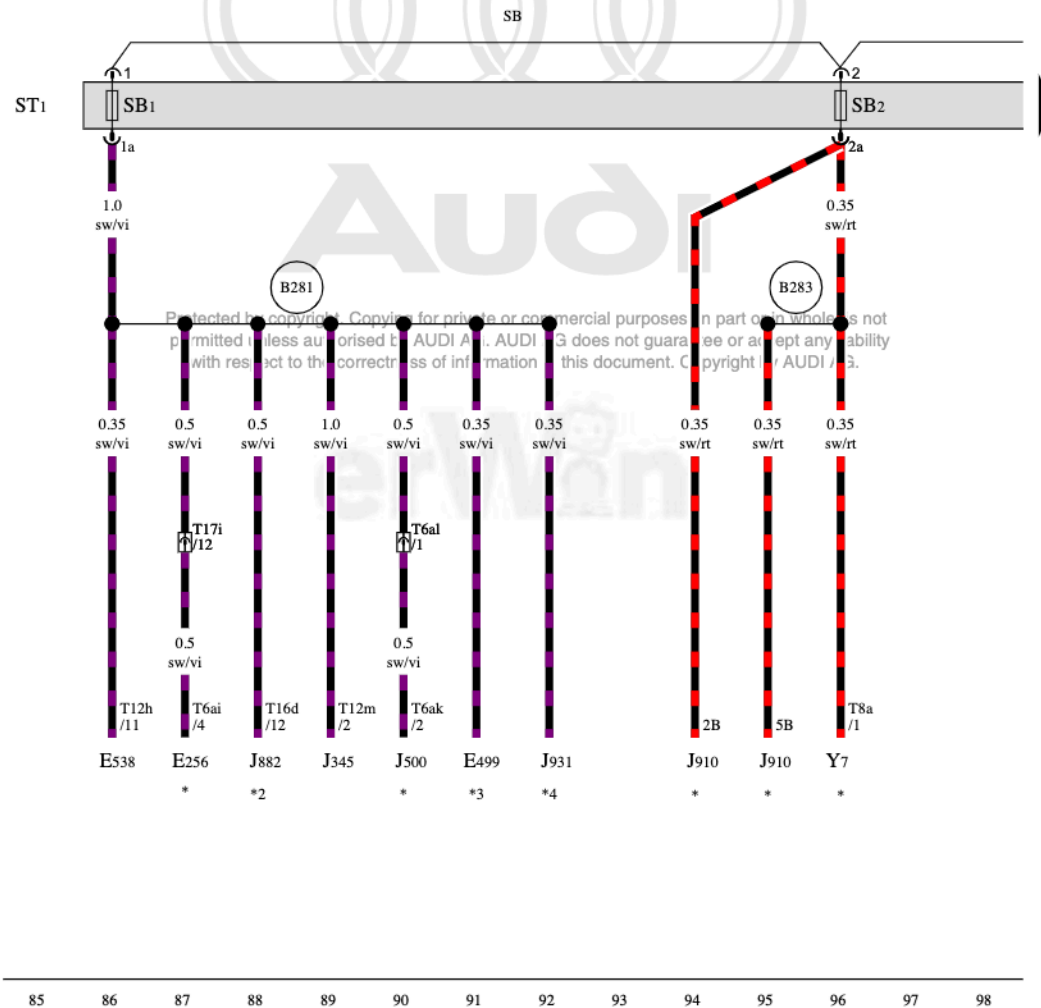


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuse Panel B, Fuse Panel 1

- G238 Air Quality Sensor
- G395 A/C Pressure/Temperature Sensor
- G657 Humidity Sensor in Fresh Air Intake Duct
- J104 ABS Control Module
- J849 Sensor Electronics Control Module
- J943 Engine Sound Generator Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB3 Fuse 3 (On Fuse Panel B)
- SB4 Fuse 4 (On Fuse Panel B)
- SB5 Fuse 5 (On Fuse Panel B)
- SB6 Fuse 6 (On Fuse Panel B)
- T3ay 3-Pin Connector
- T3p 3-Pin Connector
- T47 47-Pin Connector
- T50 50-Pin Connector

B287 Positive Connection 11 (15a) (in Main Wiring Harness)

* Refer to Applicable Engine Wiring Diagram

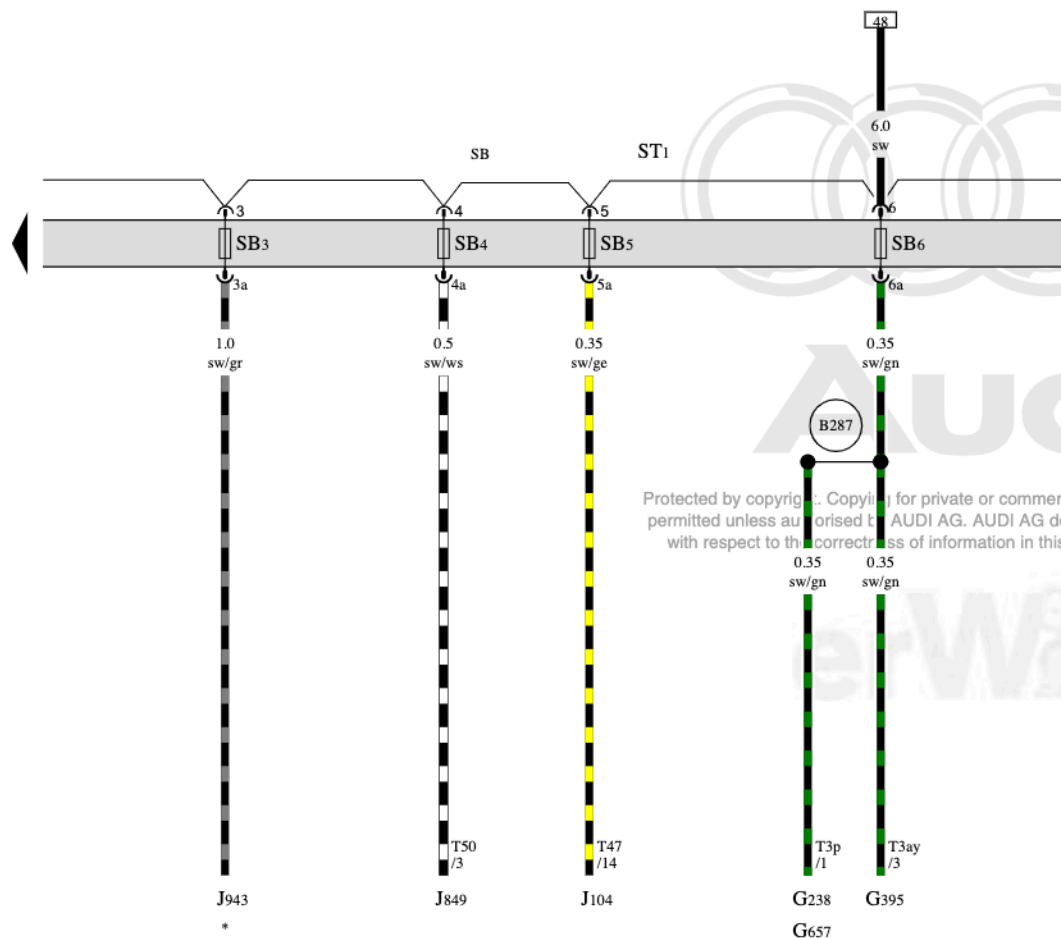

Fuse Panel B, Fuse Panel 1


- J234 Airbag Control Module
- J428 Control Module for Adaptive Cruise Control
- J706 Passenger Occupant Detection System Control Module
- J850 Control Module 2 for Adaptive Cruise Control
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB7 Fuse 7 (On Fuse Panel B)
- SB8 Fuse 8 (On Fuse Panel B)
- T8k 8-Pin Connector
- T8l 8-Pin Connector
- T10e 10-Pin Connector, Under the Right Front Seat
- T100 100-Pin Connector

B280 Positive Connection 4 (15a) (in Main Wiring Harness)


B282 Positive Connection 6 (15a) (in Main Wiring Harness)

* For USA Only

*2 For Vehicles with Adaptive Cruise Control (ACC)

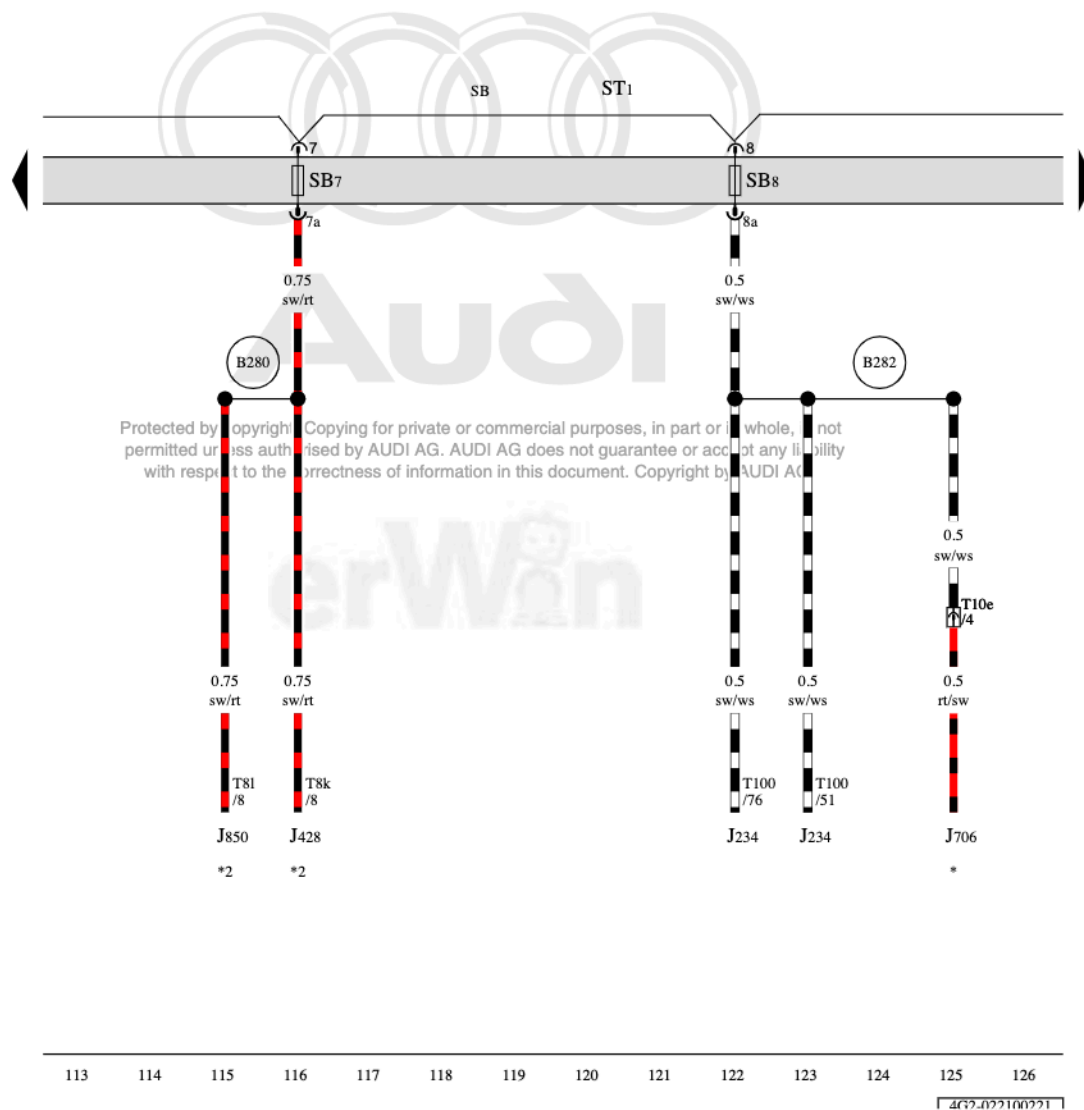

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

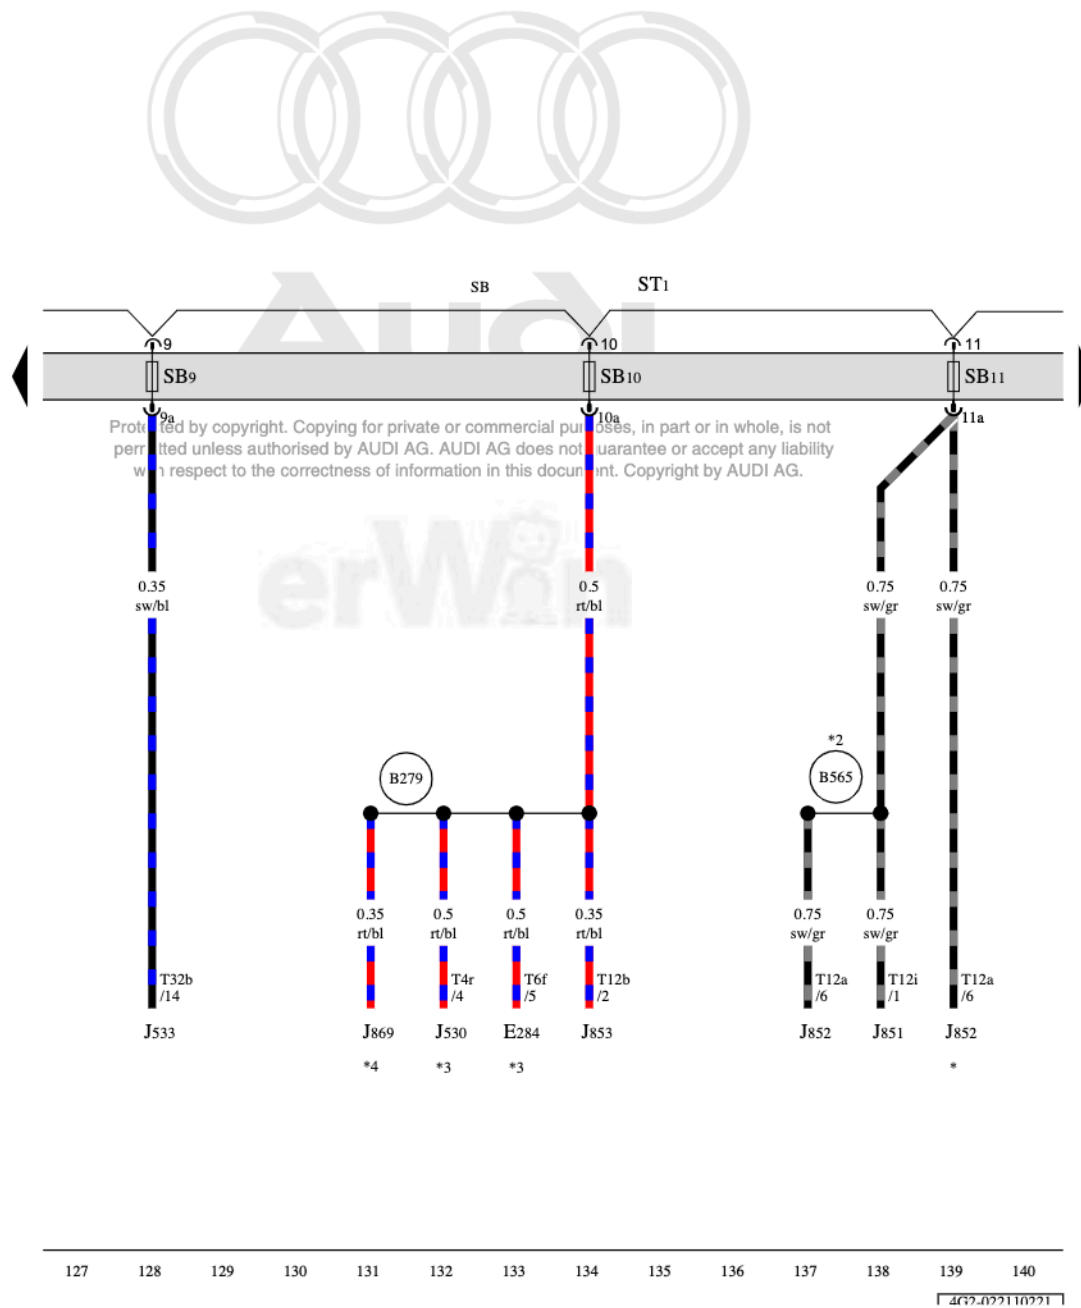

Fuse Panel B, Fuse Panel 1

- E284 Garage Door Opener Control Head
- J530 Garage Door Opener Control Module
- J533 Data Bus on Board Diagnostic Interface
- J851 Image Processing Control Module
- J852 Camera Control Module
- J853 Night Vision System Control Module
- J869 Structure-Borne Sound Control Module
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- T4r 4-Pin Connector
- T6f 6-Pin Connector
- T12a 12-Pin Connector
- T12b 12-Pin Connector
- T12i 12-Pin Connector
- T32b 32-Pin Connector

B279 Positive Connection 3 (15a) (in Main Wiring Harness)

B565 Connection 32 (in Main Wiring Harness)

* Optional Equipment

*2 For Vehicles with Adaptive Cruise Control (ACC)

*3 For Vehicles with Garage Door Opener


*4 Refer to Applicable Engine Wiring Diagram

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel B, Fuse Panel 1

- J792 Active Steering Control Module
- SA3 Fuse 3 (On Fuse Panel A)
- SB Fuse Panel B
- ST1 Fuse Panel 1, Black
- SB12 Fuse 12 (On Fuse Panel B)
- SA12 Fuse 12 (On Fuse Panel A)
- SB13 Fuse 13 (On Fuse Panel B)
- SA13 Fuse 13 (On Fuse Panel A)
- SB14 Fuse 14 (On Fuse Panel B)
- SB15 Fuse 15 (On Fuse Panel B)
- SB16 Fuse 16 (On Fuse Panel B)
- T8m 8-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- D51 Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness)
- * Refer to Applicable Engine Wiring Diagram
- *2 Through December 2011
- *3 From January 2012

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AND Positive Connection 1 (15) (in Engine/Motor Compartment Wiring Harness) with respect to the correctness of information in this document. Copyright by AUDI AG.

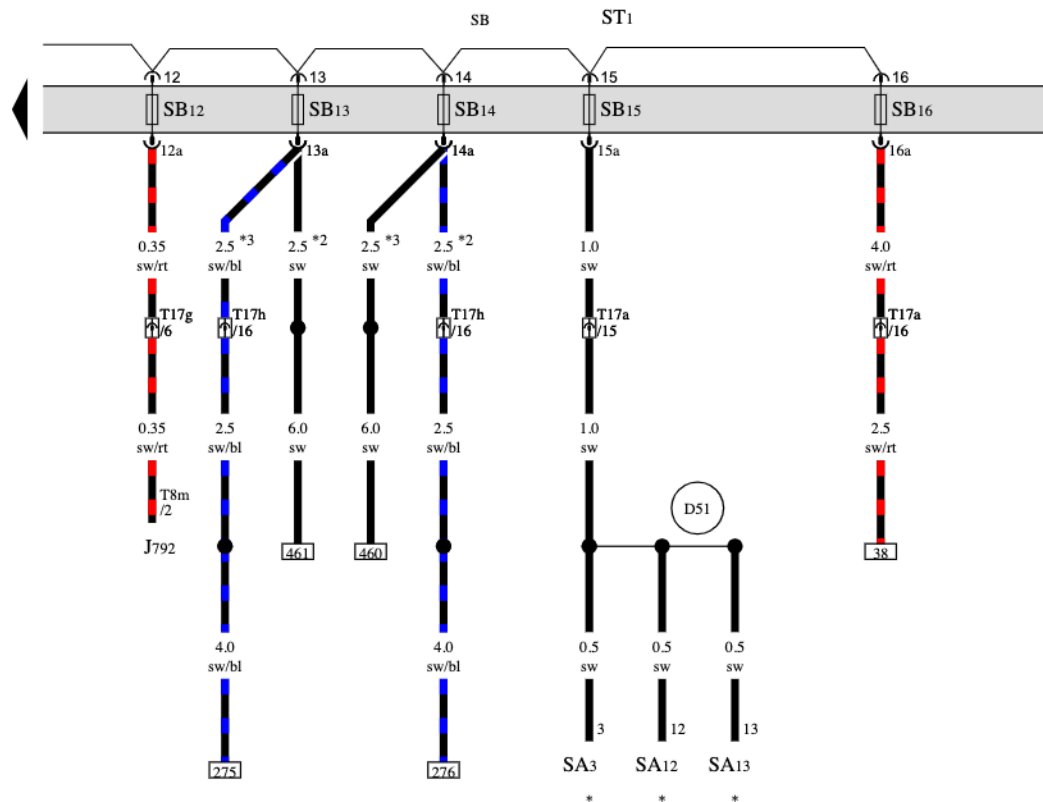


141 142 143 144 145 146 147 148 149 150 151 152 153 154

461 460 3 12 13 38

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuse Panel B, Fuse Panel 2

- E265 Rear A/C Display Control Head
- J104 ABS Control Module
- J386 Driver Door Control Module
- J533 Data Bus on Board Diagnostic Interface
- SB Fuse Panel B
- SB1 Fuse 1 (On Fuse Panel B)
- ST2 Fuse Panel 2, Brown
- SB2 Fuse 2 (On Fuse Panel B)
- SB3 Fuse 3 (On Fuse Panel B)
- SB4 Fuse 4 (On Fuse Panel B)
- T20a 20-Pin Connector
- T32b 32-Pin Connector
- T47 47-Pin Connector
- * Refer to Applicable Convenience System Wiring Diagram
- *2 Climate Control, Comfort Climatronic

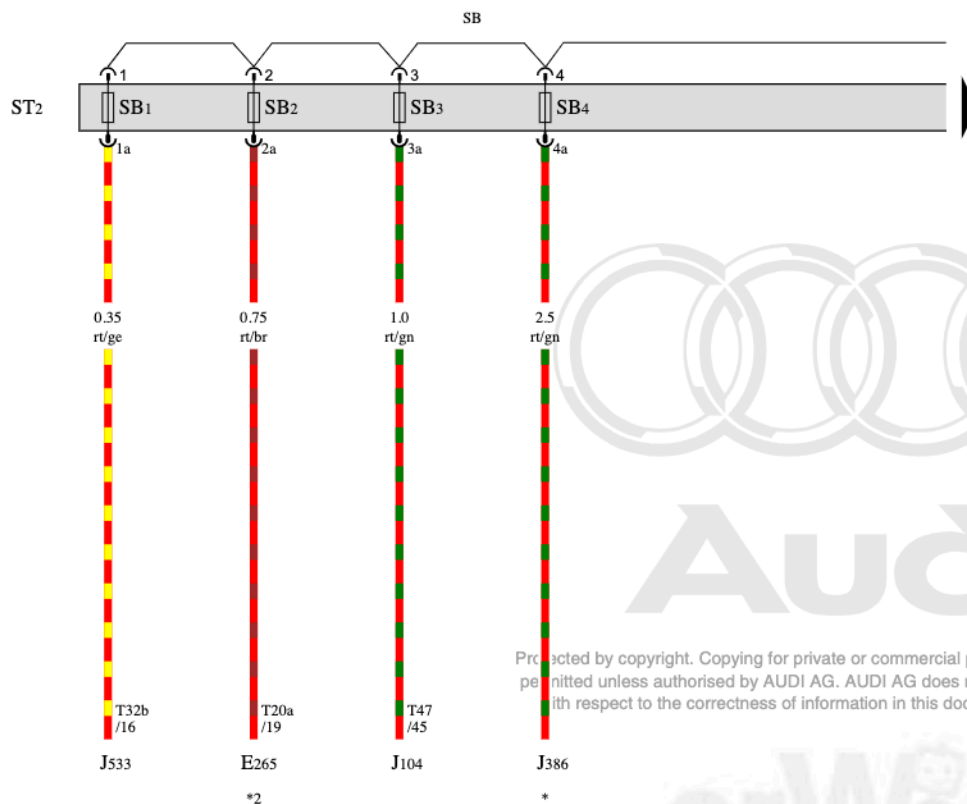


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuse Panel B, Fuse Panel 2

- | | |
|------|---|
| J388 | Left Rear Door Control Module |
| J792 | Active Steering Control Module |
| J873 | Driver Multi-Contour Seat Control Module |
| SB | Fuse Panel B |
| ST2 | Fuse Panel 2, Brown |
| SB5 | Fuse 5 (On Fuse Panel B) |
| SB6 | Fuse 6 (On Fuse Panel B) |
| SB7 | Fuse 7 (On Fuse Panel B) |
| SB8 | Fuse 8 (On Fuse Panel B) |
| T5k | 5-Pin Connector |
| T6g | 6-Pin Connector |
| T10b | 10-Pin Connector |
| T17g | 17-Pin Connector, In the Left A-Pillar Connector Station |
| T17m | 17-Pin Connector, In the Coupling Point for the Left Front Seat |
| T27c | 27-Pin Connector, On the Left B-Pillar |
| V1 | Sunroof Motor |
| * | Refer to Applicable Convenience System Wiring Diagram |
| *2 | Refer to Applicable Seat Adjustment Wiring Diagram |
| *3 | Avant |
| *4 | Through May 2011 |


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

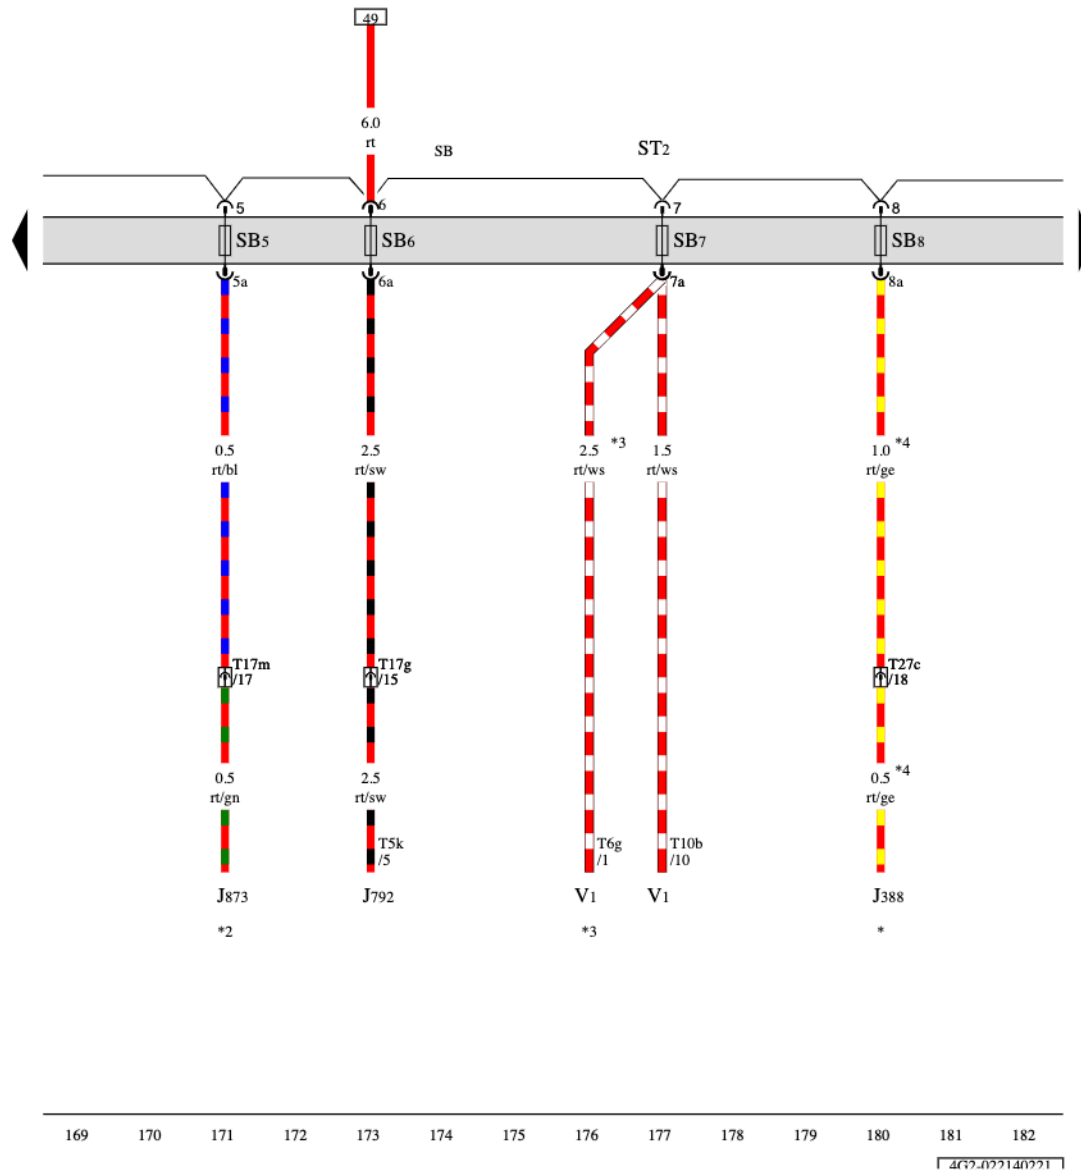

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Fuse Panel B, Fuse Panel 2

- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- J364 Auxiliary Heater Control Module
- J386 Driver Door Control Module
- J502 Tire Pressure Monitoring Control Module
- SB Fuse Panel B
- ST2 Fuse Panel 2, Brown
- SB9 Fuse 9 (On Fuse Panel B)
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- T2az 2-Pin Connector
- T6be 6-Pin Connector
- T6g 6-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T27a 27-Pin Connector, On the Left A-Pillar
- V1 Sunroof Motor
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with a Parking Heater
- *3 For Vehicles with Lumbar Support Adjustment
- *4 Avant
- *5 For Vehicles with Tire Pressure Monitoring
- *6 Through May 2011

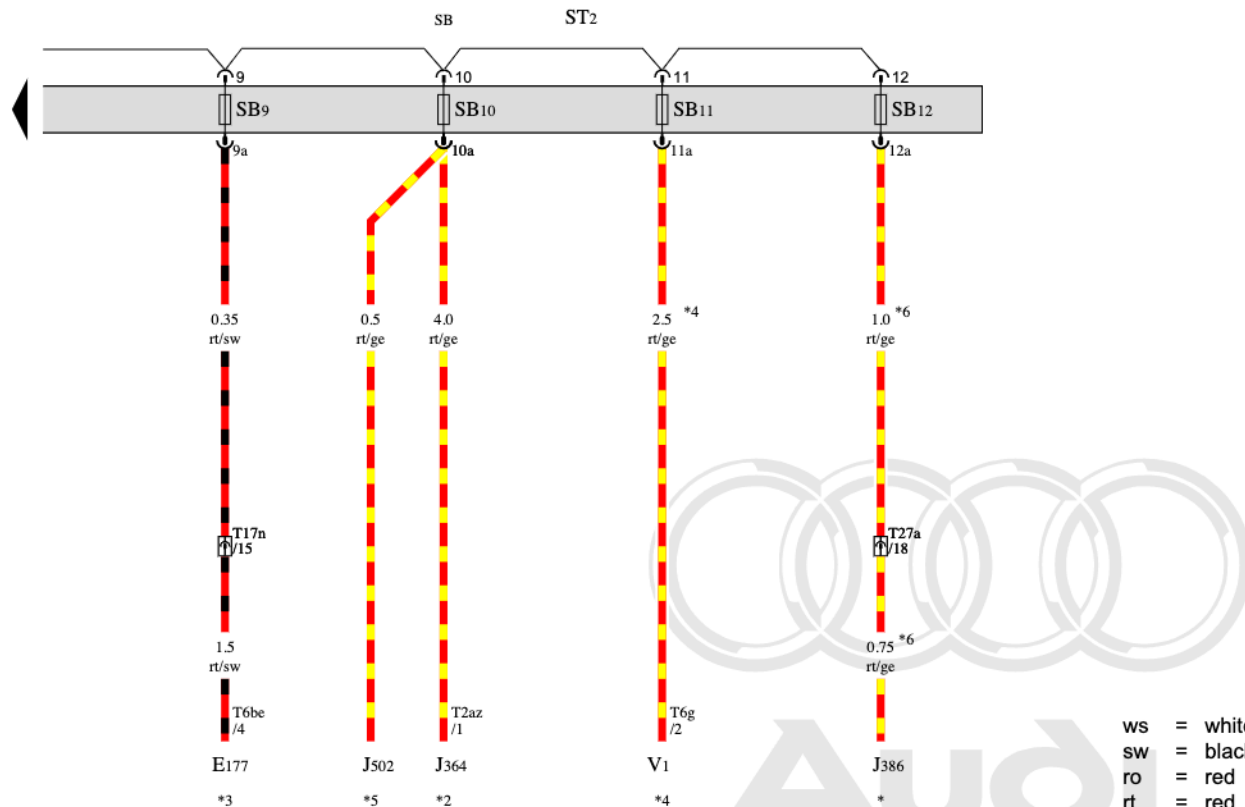

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Protected by copyright. Copying for private or commercial purposes in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © AUDI AG.

Fuse Panel B, Fuse Panel 3

- F Brake Lamp Switch
- G100 Brake Pedal Position Sensor
- G476 Clutch Position Sensor
- J318 Vacuum Pump Relay
- J388 Left Rear Door Control Module
- J538 Fuel Pump Control Module
- J880 Reducing Agent Metering System Control Module
- J883 Exhaust Door Control Unit
- SA Fuse Panel A
- SB Fuse Panel B
- SB1 Fuse 1 (On Fuse Panel B)
- SB2 Fuse 2 (On Fuse Panel B)
- ST3 Fuse Panel 3, Red
- SB3 Fuse 3 (On Fuse Panel B)
- SB4 Fuse 4 (On Fuse Panel B)
- SB5 Fuse 5 (On Fuse Panel B)
- T6ah 6-Pin Connector
- T6ar 6-Pin Connector
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- T27c 27-Pin Connector, On the Left B-Pillar

B635 Positive Connection 3 (87) (in Main Wiring Harness)


- * Refer to Applicable Convenience System Wiring Diagram
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 Refer to Applicable Engine Wiring Diagram
- *4 For Vehicles with Hybrid Drive

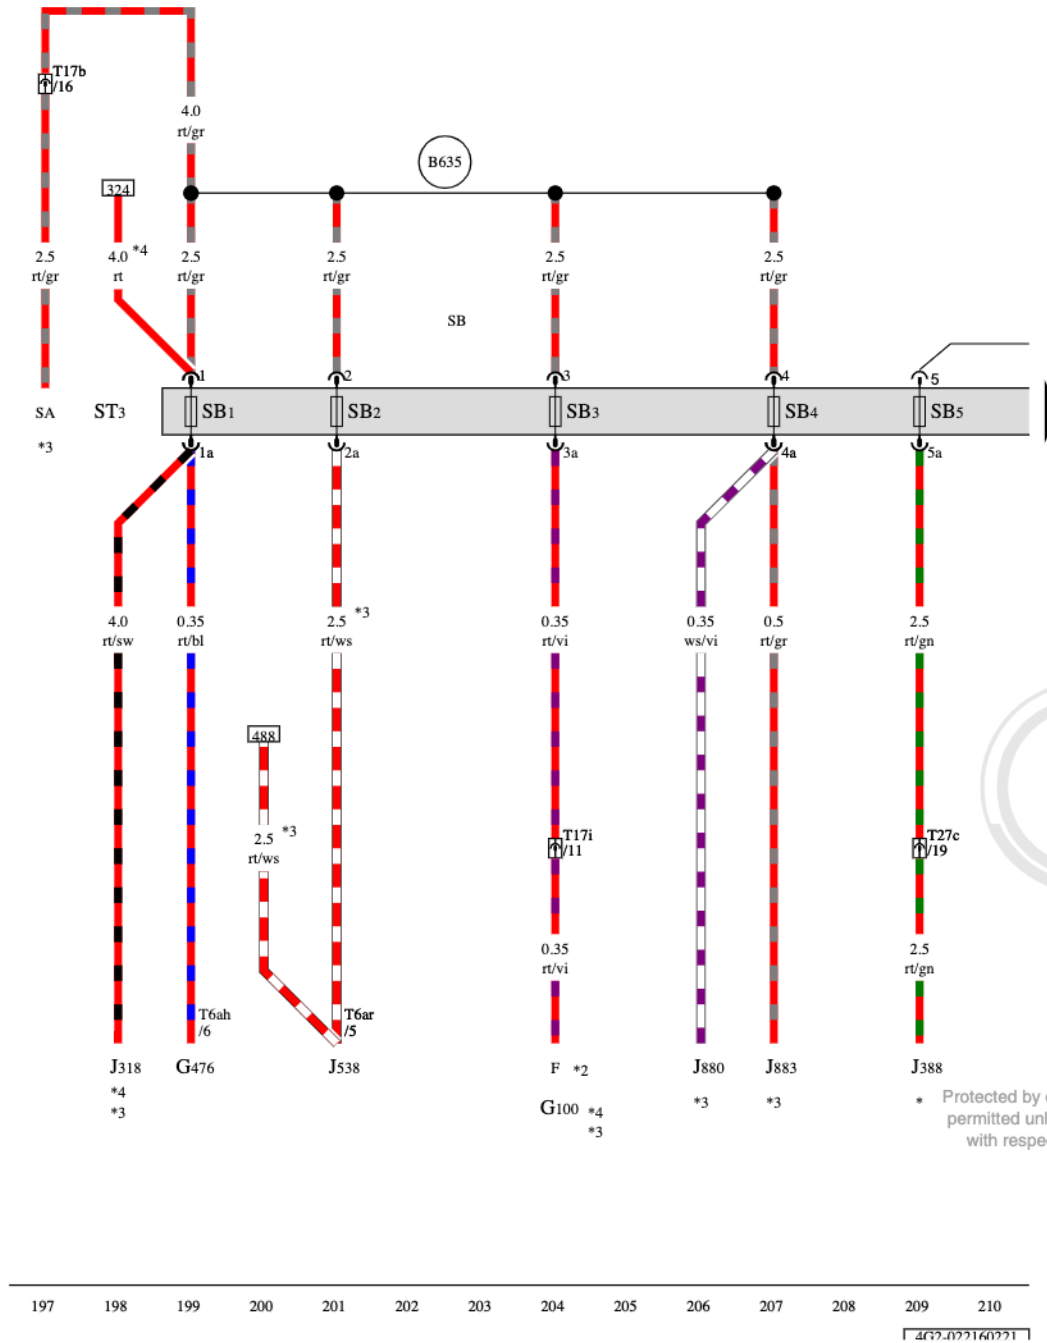


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

* Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

| | |
|------|--|
| G397 | Rain/Light Recognition Sensor |
| J400 | Wiper Motor Control Module |
| J413 | Horn Relay |
| J872 | Front Passenger Multi-Contour Seat Control Module |
| SB | Fuse Panel B |
| ST3 | Fuse Panel 3, Red |
| SB6 | Fuse 6 (On Fuse Panel B) |
| SB7 | Fuse 7 (On Fuse Panel B) |
| SB8 | Fuse 8 (On Fuse Panel B) |
| SB9 | Fuse 9 (On Fuse Panel B) |
| T3o | 3-Pin Connector |
| T4t | 4-Pin Connector |
| T17n | 17-Pin Connector, In the Coupling Point for the Right Front Seat |
| * | Refer to Applicable Standard Equipment Wiring Diagram |
| *2 | From June 2011 |

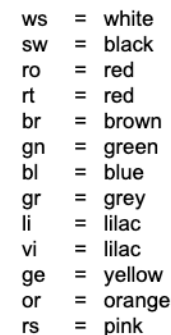

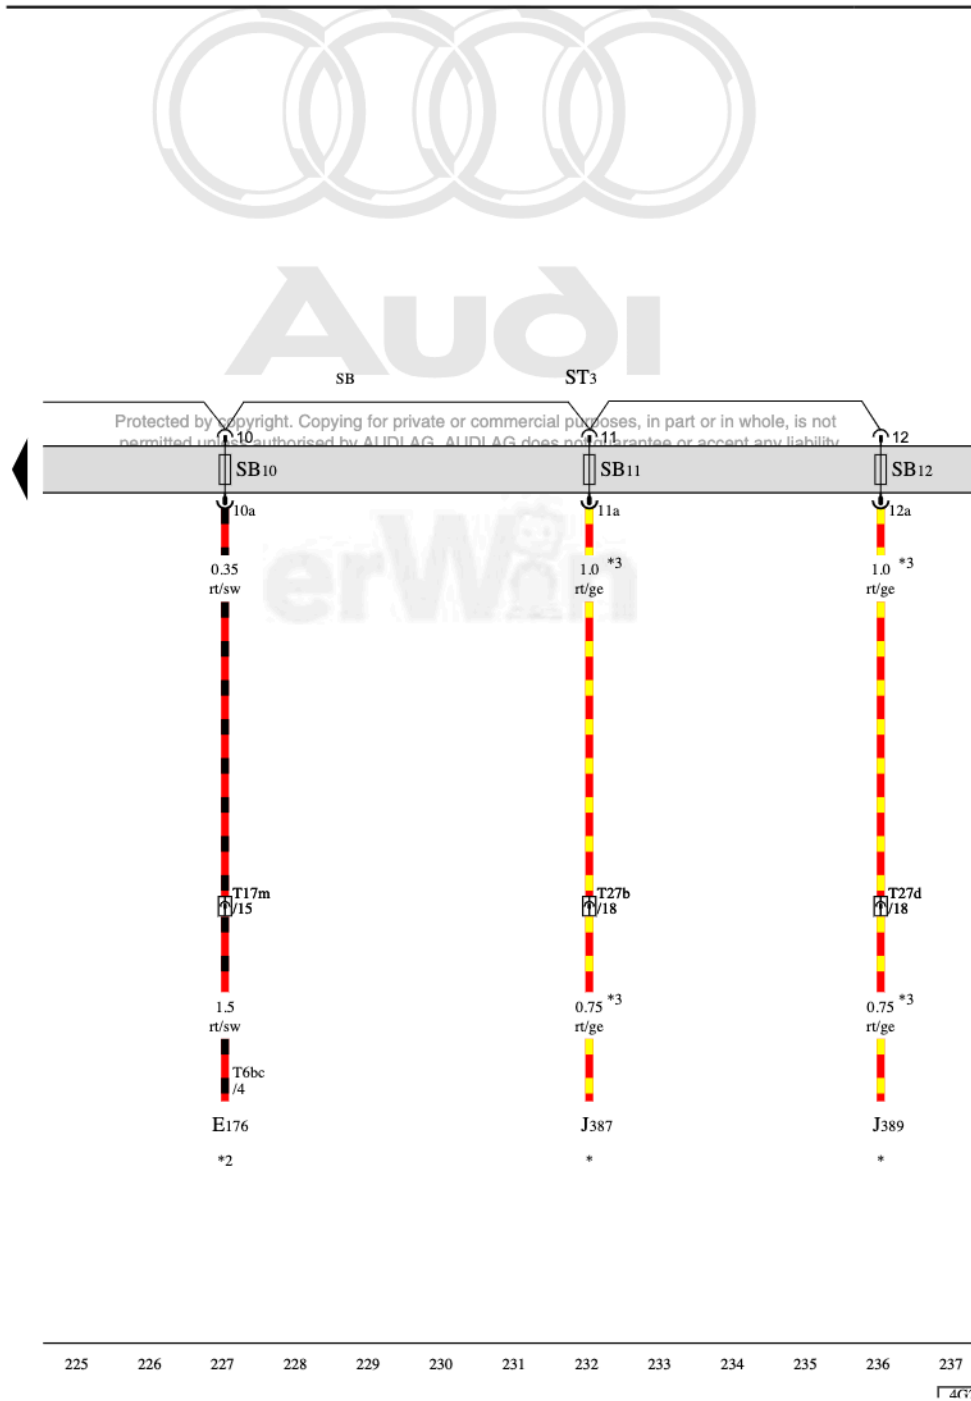


Fuse Panel B, Fuse Panel 3

- E176 Driver Seat Lumbar Support Adjustment Switch
- J387 Front Passenger Door Control Module
- J389 Right Rear Door Control Module
- SB Fuse Panel B
- ST3 Fuse Panel 3, Red
- SB10 Fuse 10 (On Fuse Panel B)
- SB11 Fuse 11 (On Fuse Panel B)
- SB12 Fuse 12 (On Fuse Panel B)
- T6bc 6-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T27b 27-Pin Connector, On the Right A-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles Without Adjustable Seats
- *3 Through May 2011

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink



 *3 For Vehicles with Start/Stop System




Fuse Panel C, Fuse Panel 1

- J285 Instrument Cluster Control Module
- J527 Steering Column Electronics Control Module
- J676 Chip Card Reader Control Module
- SC Fuse Panel C
- ST1 Fuse Panel 1, Black
- SC5 Fuse 5 (On Fuse Panel C)
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- T16e 16-Pin Connector
- T32 32-Pin Connector
- T32d 32-Pin Connector

A164 Positive Connection 2 (30a) (in Instrument Panel Wiring Harness)

* For Vehicles with Japan Equipment

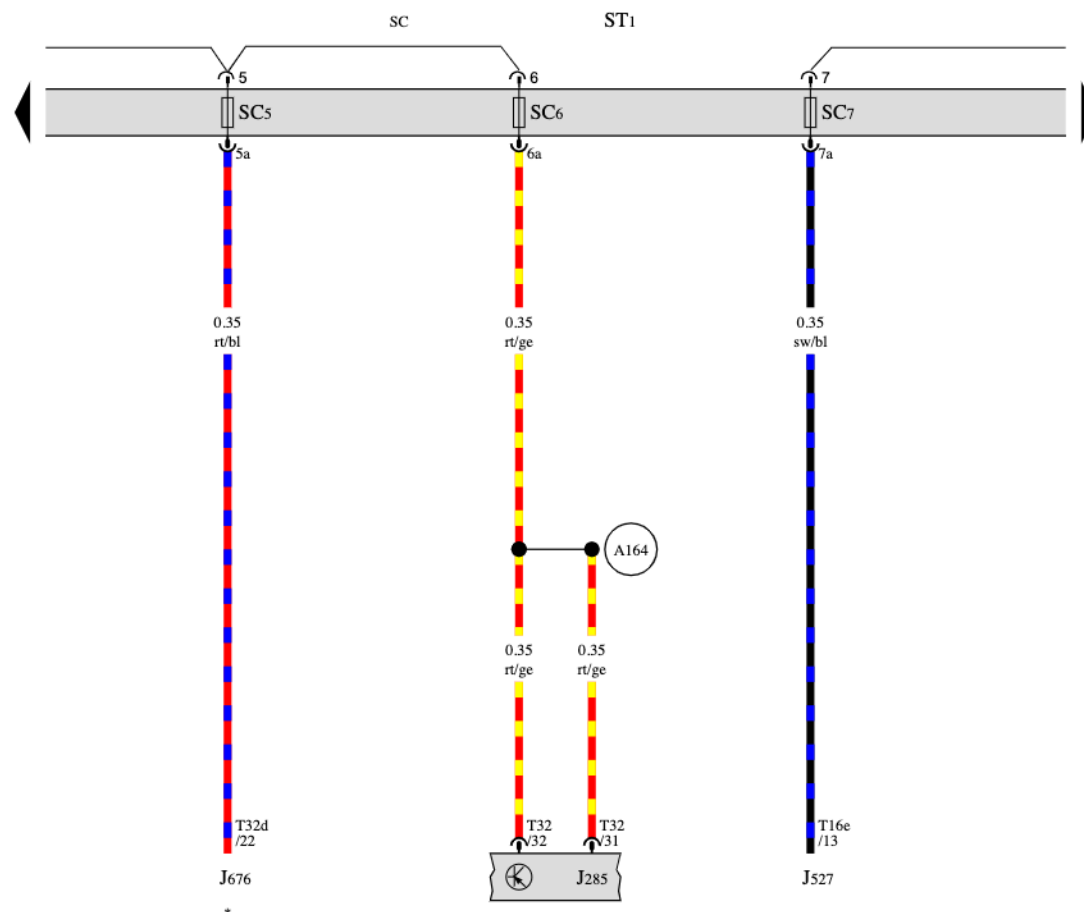

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

Fuse Panel C, Fuse Panel 1

- E102 Headlamp Range Control Adjuster
- J431 Headlamp Range Control Module
- J604 Auxiliary Heater Control Module
- J667 Left Headlamp Power Output Module
- J668 Right Headlamp Power Output Module
- J745 Cornering Lamp and Headlamp Range Control Module
- SC Fuse Panel C
- ST1 Fuse Panel 1, Black
- SC8 Fuse 8 (On Fuse Panel C)
- SC9 Fuse 9 (On Fuse Panel C)
- SC10 Fuse 10 (On Fuse Panel C)
- SC11 Fuse 11 (On Fuse Panel C)
- SC12 Fuse 12 (On Fuse Panel C)
- T6l 6-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T26 26-Pin Connector
- V48 Left Headlamp Range Control Adjustment Motor
- V49 Right Headlamp Range Control Adjustment Motor

A20 Positive Connection 15a (in Instrument Panel Wiring Harness)


- * For Vehicles Without Automatic Headlamp Range Control
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 For Vehicles with Hybrid Drive
- *4 Through May 2011
- *5 From June 2011

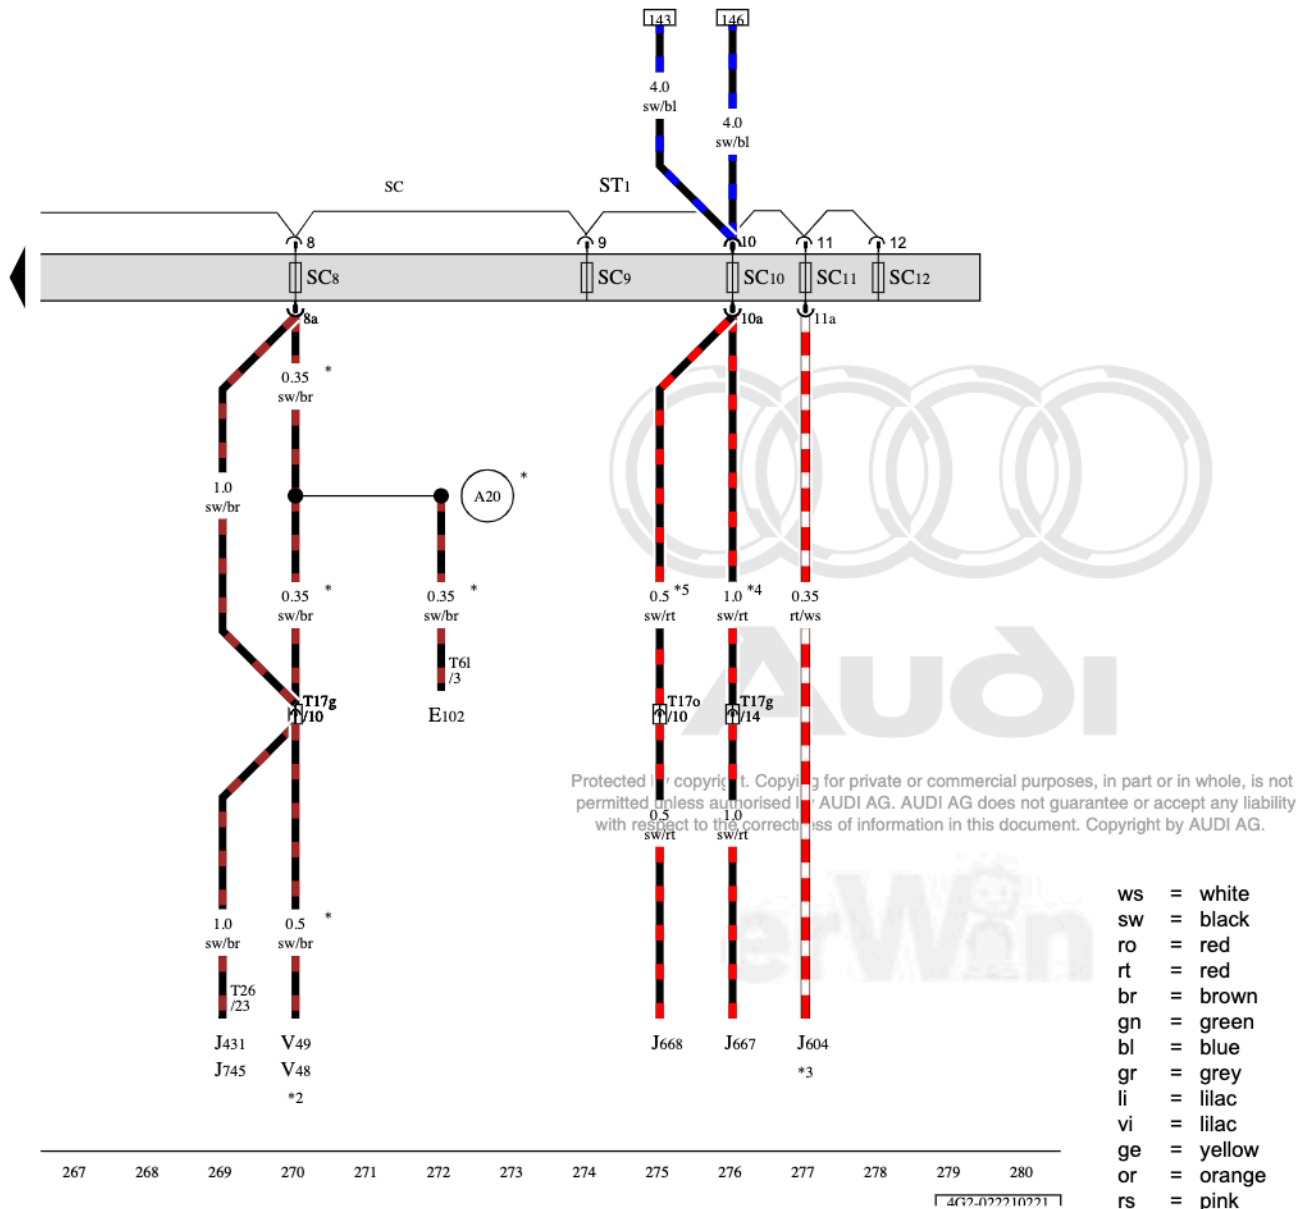

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuse Panel C, Fuse Panel 2

- D2 Anti-Theft Immobilizer Reader Coil
- J126 Fresh Air Blower Control Module
- J255 Climatronic Control Module
- J764 Electronic Steering Column Lock Control Module
- SC Fuse Panel C, Instrument Panel Fuse Panel, Left
- SC1 Fuse 1 (On Fuse Panel C)
- ST2 Fuse Panel 2, Brown
- SC2 Fuse 2 (On Fuse Panel C)
- SC3 Fuse 3 (On Fuse Panel C)
- SC4 Fuse 4 (On Fuse Panel C)
- SC5 Fuse 5 (On Fuse Panel C)
- T4am 4-Pin Connector
- T4cb 4-Pin Connector
- T6p 6-Pin Connector
- T16 16-Pin Connector
- T20c 20-Pin Connector
- * Diagnostic Connector

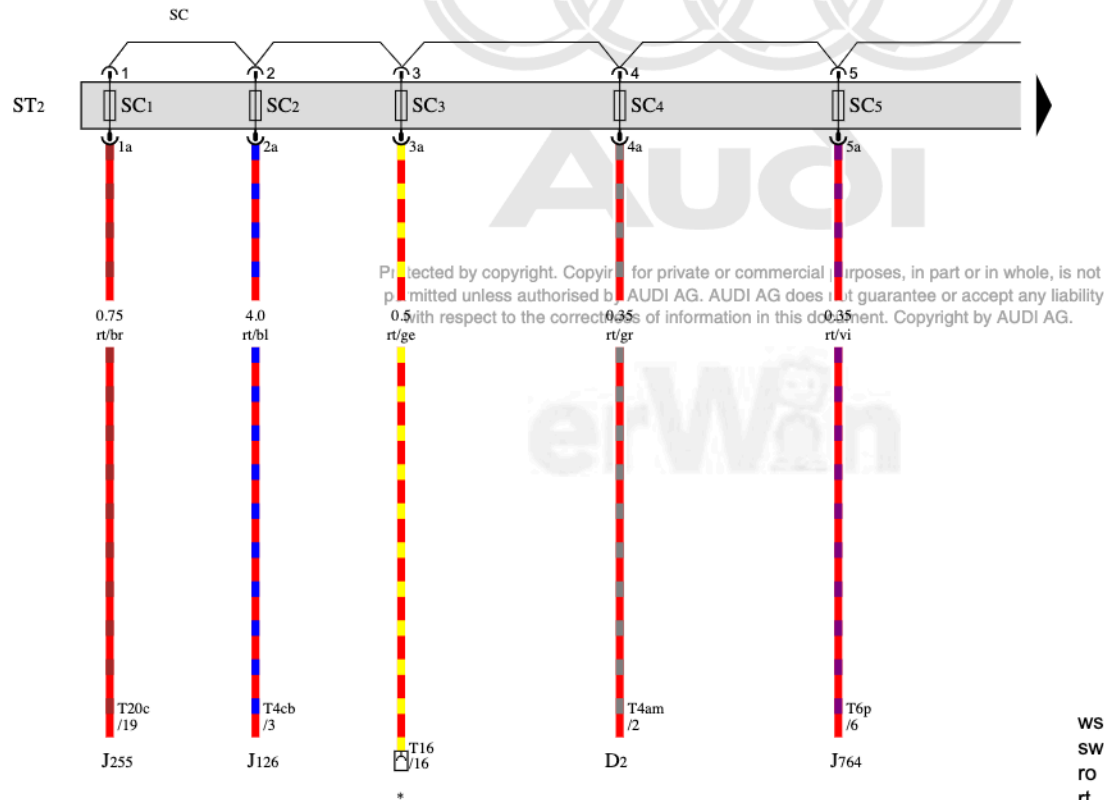

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Fuse Panel C, Fuse Panel 2


- E1 Light Switch
- J527 Steering Column Electronics Control Module
- J866 Power Adjustable Steering Column Control Module
- SC Fuse Panel C, Instrument Panel Fuse Panel, Left
- ST2 Fuse Panel 2, Brown
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- SC8 Fuse 8 (On Fuse Panel C)
- SC9 Fuse 9 (On Fuse Panel C)
- SC10 Fuse 10 (On Fuse Panel C)
- SC11 Fuse 11 (On Fuse Panel C)
- SC12 Fuse 12 (On Fuse Panel C)
- T4af 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T16e 16-Pin Connector

A32 Positive Connection (30) (in Instrument Panel Wiring Harness)

- * Refer to Applicable Wiring Diagram
- *2 For Vehicles with Heated Steering Wheel
- *3 For Vehicles with Start/Stop System


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

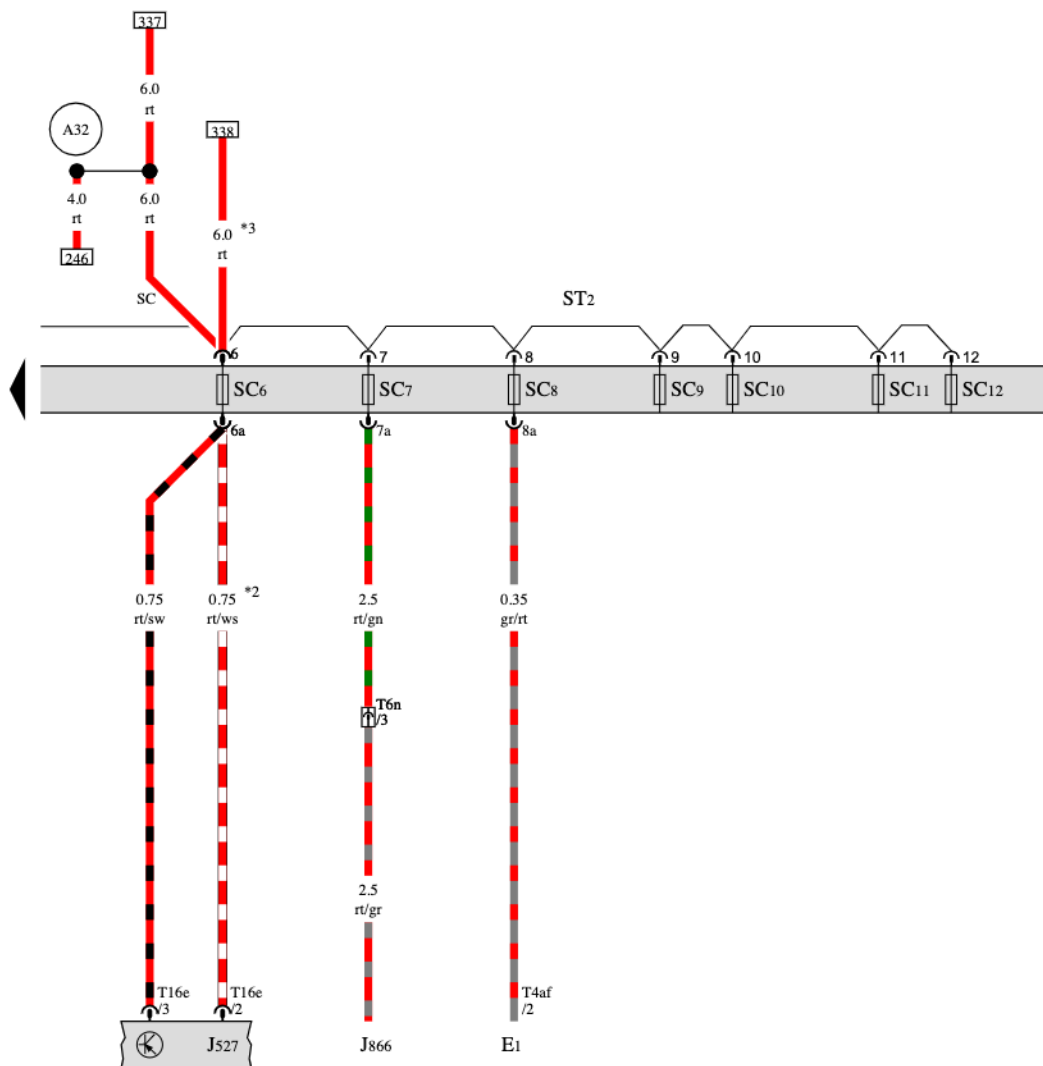

295 296 297 298 299 300 301 302 303 304 305 306 307 308

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

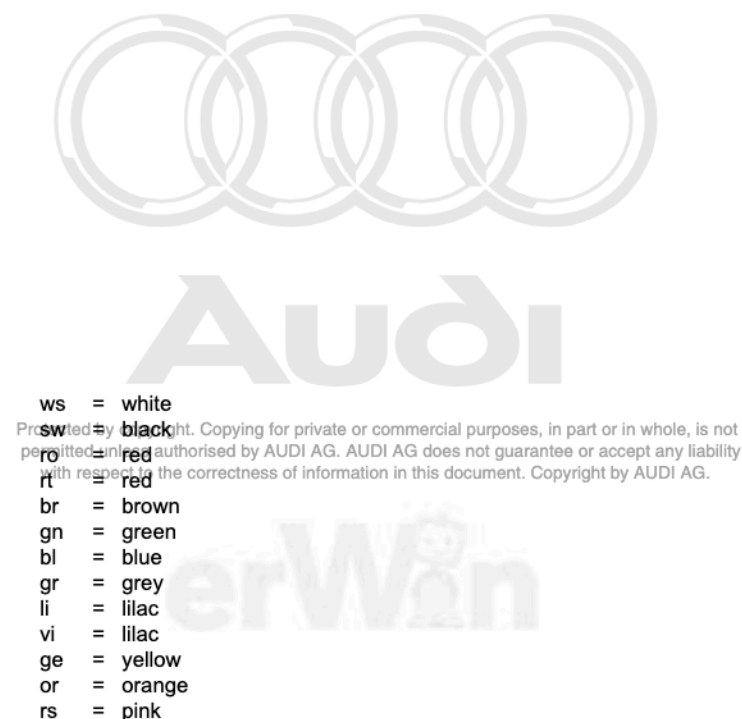

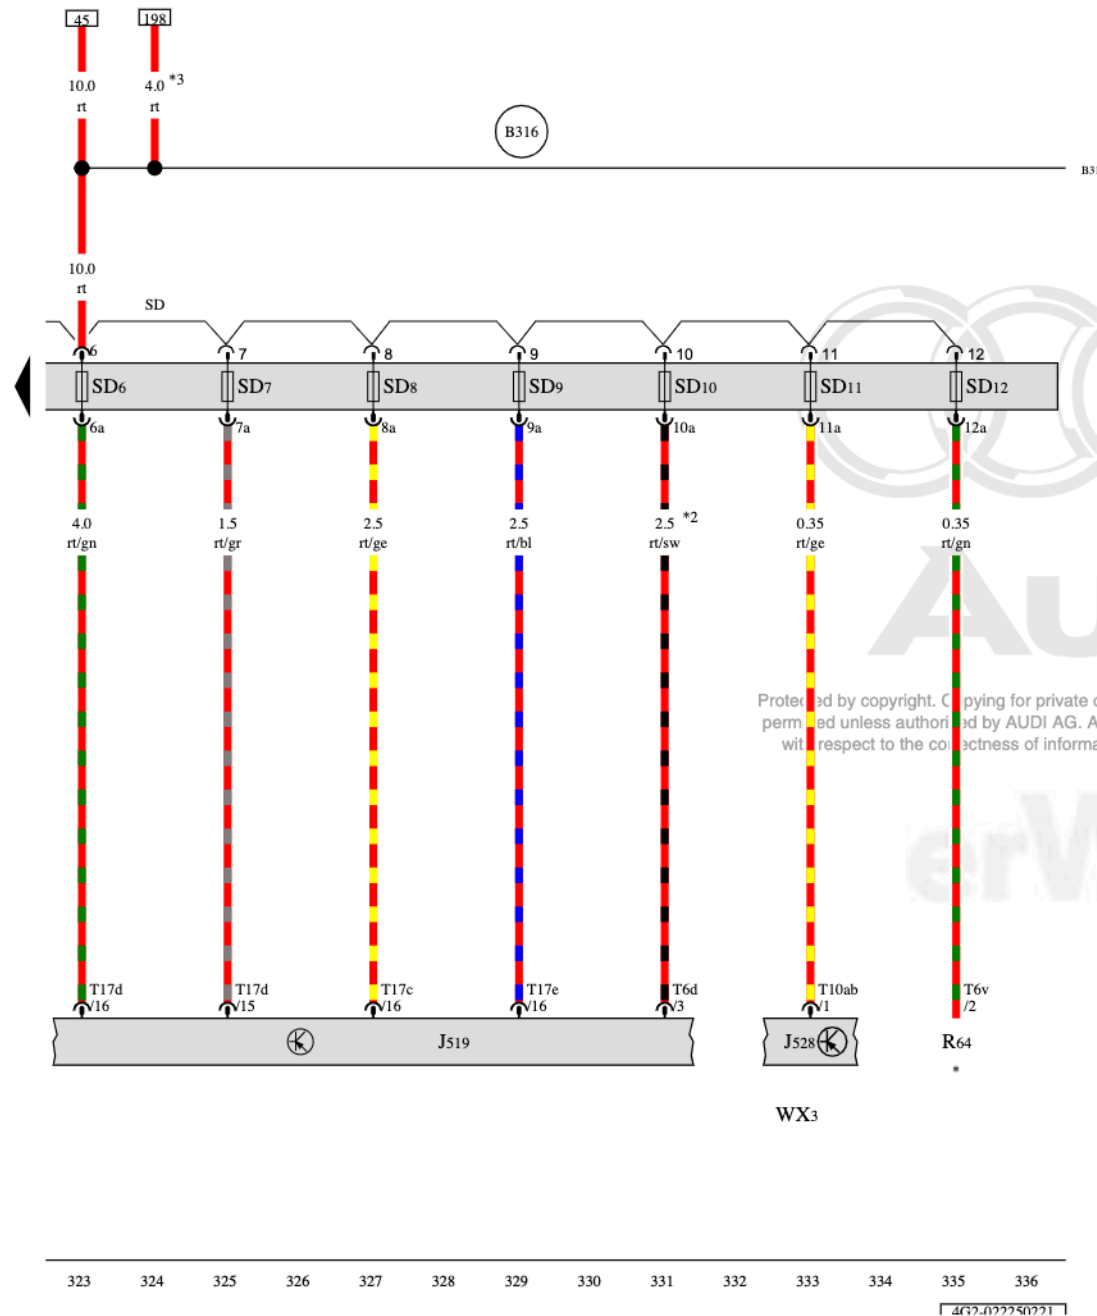


Fuse Panel D, Positive Connection 2 (30a) (in Main Wiring Harness)

- J519 Vehicle Electrical System Control Module
- J528 Roof Electronics Control Module
- R64 Parking Heater Radio Receiver
- SD Fuse Panel D, Near the Vehicle Electrical System Control Module
- SD6 Fuse 6 (On Fuse Panel D)
- SD7 Fuse 7 (On Fuse Panel D)
- SD8 Fuse 8 (On Fuse Panel D)
- SD9 Fuse 9 (On Fuse Panel D)
- SD10 Fuse 10 (On Fuse Panel D)
- SD11 Fuse 11 (On Fuse Panel D)
- SD12 Fuse 12 (On Fuse Panel D)
- T6d 6-Pin Connector
- T6v 6-Pin Connector
- T10ab 10-Pin Connector
- T17c 17-Pin Connector
- T17d 17-Pin Connector
- T17e 17-Pin Connector
- WX3 Front Roof Module

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

- * For Vehicles with a Parking Heater
- *2 For Vehicles with Seat Heating
- *3 For Vehicles with Hybrid Drive

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

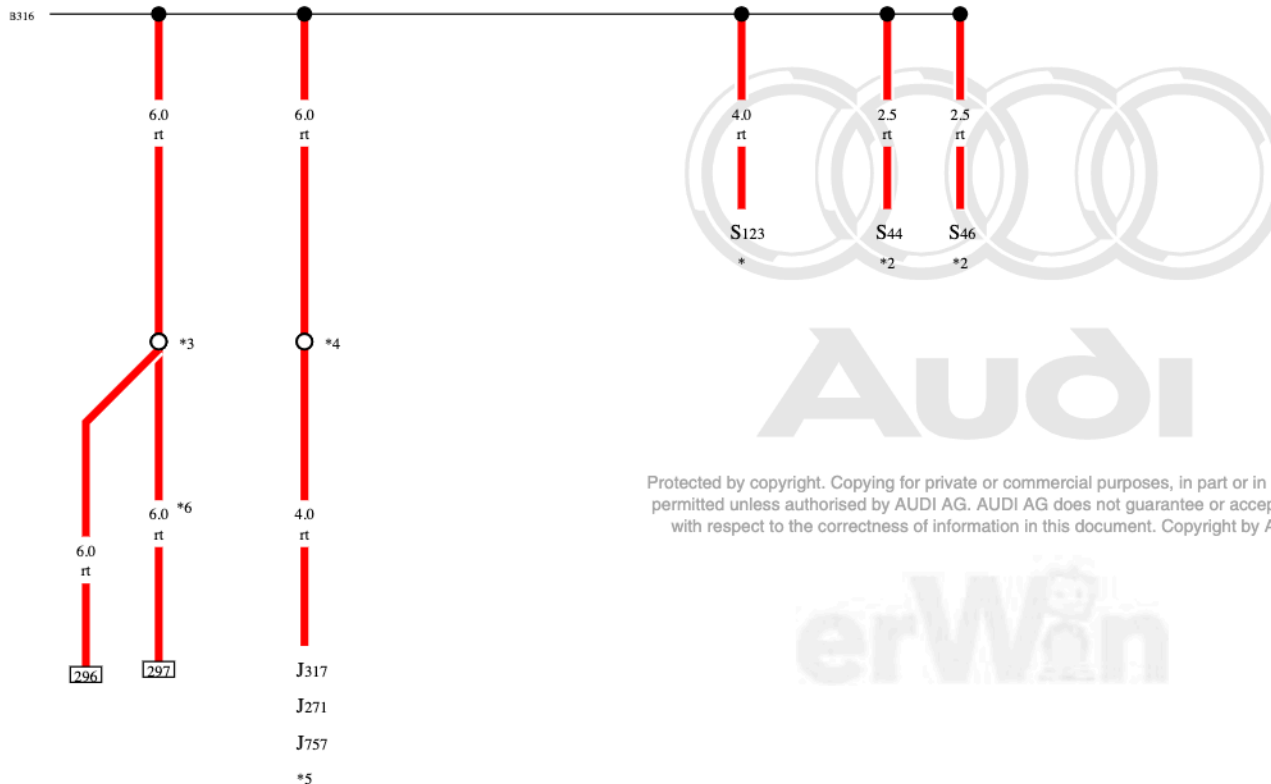

Positive Connection 2 (30a) (in Main Wiring Harness)

- J271 Motronic Engine Control Module Power Supply Relay
- J317 Terminal 30 Power Supply Relay
- J757 Engine Component Power Supply Relay
- S44 Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S123 ABS Control Module Fuse 1

B316 Positive Connection 2 (30a) (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for ABS
- *2 Refer to Applicable Seat Adjustment Wiring Diagram
- *3 Relay Panel Under the Instrument Panel, Left
- *4 Threaded Connection in the Plenum Chamber E-Box
- *5 Refer to Applicable Engine Wiring Diagram
- *6 For Vehicles with Start/Stop System

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

337 338 339 340 341 342 343 344 345 346 347 348 349 350

123456789101112131415161718192021222324252627282930313233343536373839404142434445464748495051525354555657585960616263646566676869707172737475767778798081828384858687888990919293949596979899100

Fuse Panel F, Fuse Panel 1

- E409 Left Rear Seat Massage Button
- E410 Right Rear Seat Massage Button
- J345 Towing Recognition Control Module
- J387 Front Passenger Door Control Module
- J540 Electromechanical Parking Brake Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- ST1 Fuse Panel 1, Black
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T12m 12-Pin Connector
- T30a 30-Pin Connector
- U13 Converter with Socket, 12 V-230 V
- Z105 Cupholder with Heating and Cooling Element
- * Refer to Applicable Convenience System Wiring Diagram
- *2 For Vehicles with Trailer Socket
- *3 For Vehicles with China Equipment

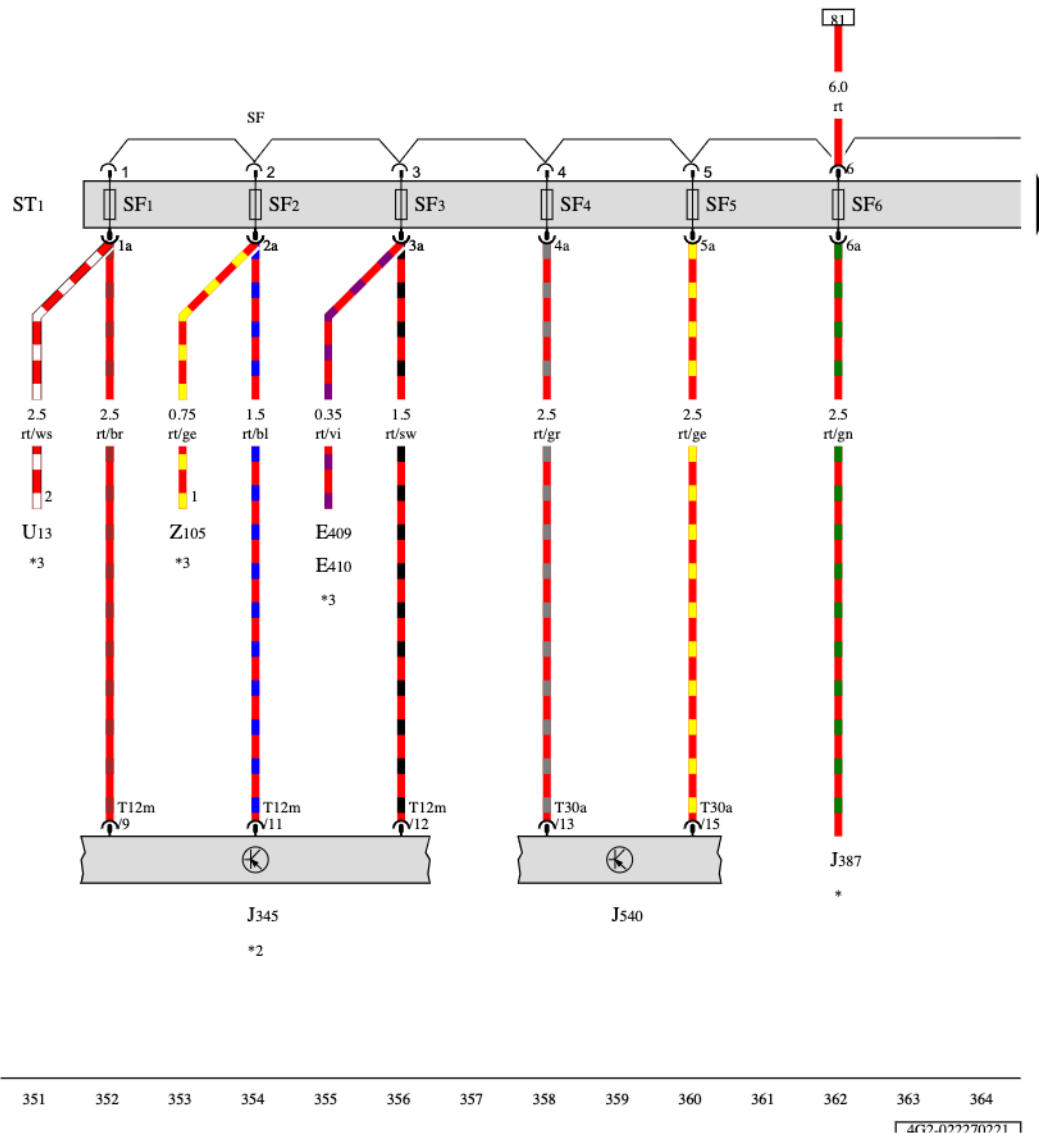


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

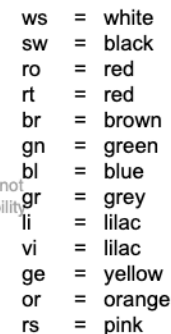


| | | | | | | | | | | | | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------------------|
| | | | | | | | | | | | | |
| 365 | 366 | 367 | 368 | 369 | 370 | 371 | 372 | 373 | 374 | 375 | 376 | 377 378 |
| | | | | | | | | | | | | df(32..0)??80?2? |

| | |
|-------------|---|
| E265 | Rear A/C Display Control Head |
| J393 | Comfort System Central Control Module |
| J799 | Right Front Seat Ventilation Control Module |
| J882 | Seat Heating Control Module |
| SF | Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right |
| ST1 | Fuse Panel 1, Black |
| SF7 | Fuse 7 (On Fuse Panel F) |
| SF8 | Fuse 8 (On Fuse Panel F) |
| SF9 | Fuse 9 (On Fuse Panel F) |
| SF10 | Fuse 10 (On Fuse Panel F) |
| SF11 | Fuse 11 (On Fuse Panel F) |
| SF12 | Fuse 12 (On Fuse Panel F) |
| T3r | 3-Pin Connector |
| T6i | 6-Pin Connector, In the Coupling Point for the Right Front Seat |
| T12o | 12-Pin Connector, In the Luggage Compartment, Right |
| T16d | 16-Pin Connector |
| T17s | 17-Pin Connector |
| B317 | Positive Connection 3 (30a) (in Main Wiring Harness) |
| * | Climate Control, Basic Climatronic |
| *2 | Climate Control, Comfort Climatronic |
| *3 | For Vehicles with Special Functions Interface |
| *4 | For Vehicles with Seat Ventilation |

Fuse Panel F, Fuse Panel 2


- J807 Sockets Relay
- J854 Left Front Seat Belt Tensioner Control Module
- J855 Right Front Seat Belt Tensioner Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST2 Fuse Panel 2, Red
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- T4ac 4-Pin Connector
- T4x 4-Pin Connector
- U1 Cigarette Lighter
- U5 12 V Socket
- U9 Rear Cigarette Lighter
- U13 Converter with Socket, 12 V-230 V
- U18 12 V Socket 2
- U19 12 V Socket 3
- U20 12 V Socket 4
- Z105 Cupholder with Heating and Cooling Element
- B275 Positive Connection (87) (in Main Wiring Harness)
- B350 Positive Connection 1 (87a) (in Main Wiring Harness)
- B351 Positive Connection 2 (87a) (in Main Wiring Harness)
- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 Refer to Applicable Airbag Wiring Diagram
- *3 For Vehicles with China Equipment

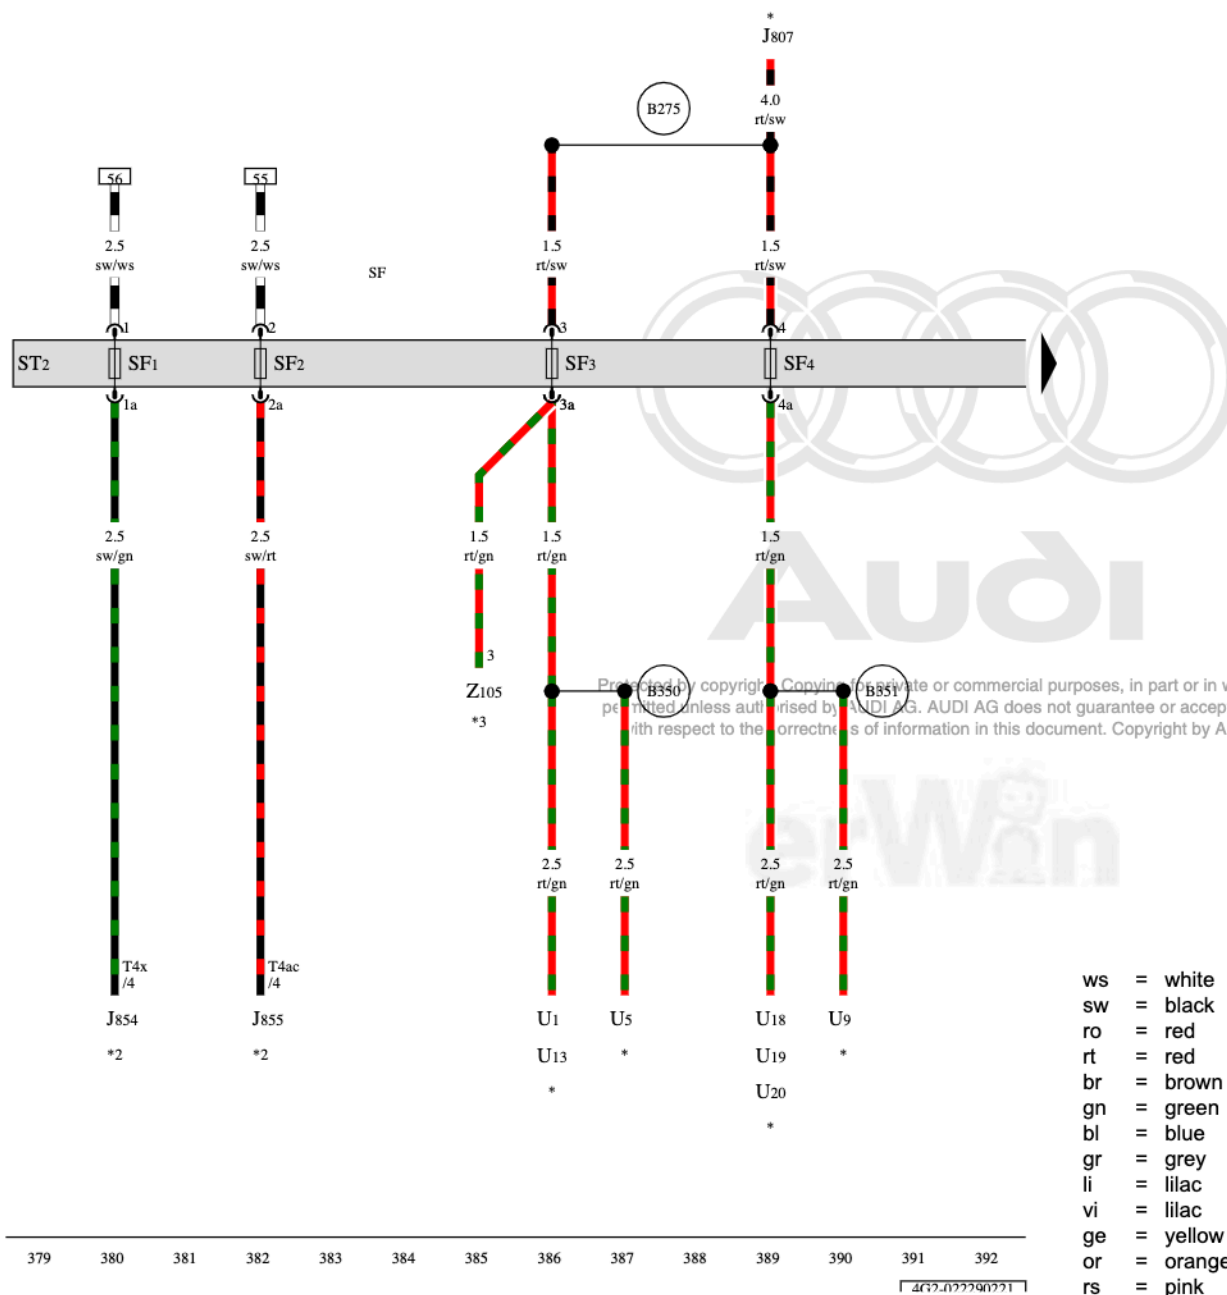

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel F, Fuse Panel 2


- E538 Electromechanical Parking Brake Button
- J197 Level Control System Control Module
- J250 Electronic Damping Control Module
- J389 Right Rear Door Control Module
- J393 Comfort System Central Control Module
- J605 Rear Lid Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST2 Fuse Panel 2, Red
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- T4bx 4-Pin Connector
- T9a 9-Pin Connector
- T12h 12-Pin Connector
- T17r 17-Pin Connector
- T27d 27-Pin Connector, On the Right B-Pillar
- * Refer to Applicable Convenience System Wiring Diagram
- *2 Depending on Equipment
- *3 Avant
- *4 From June 2011

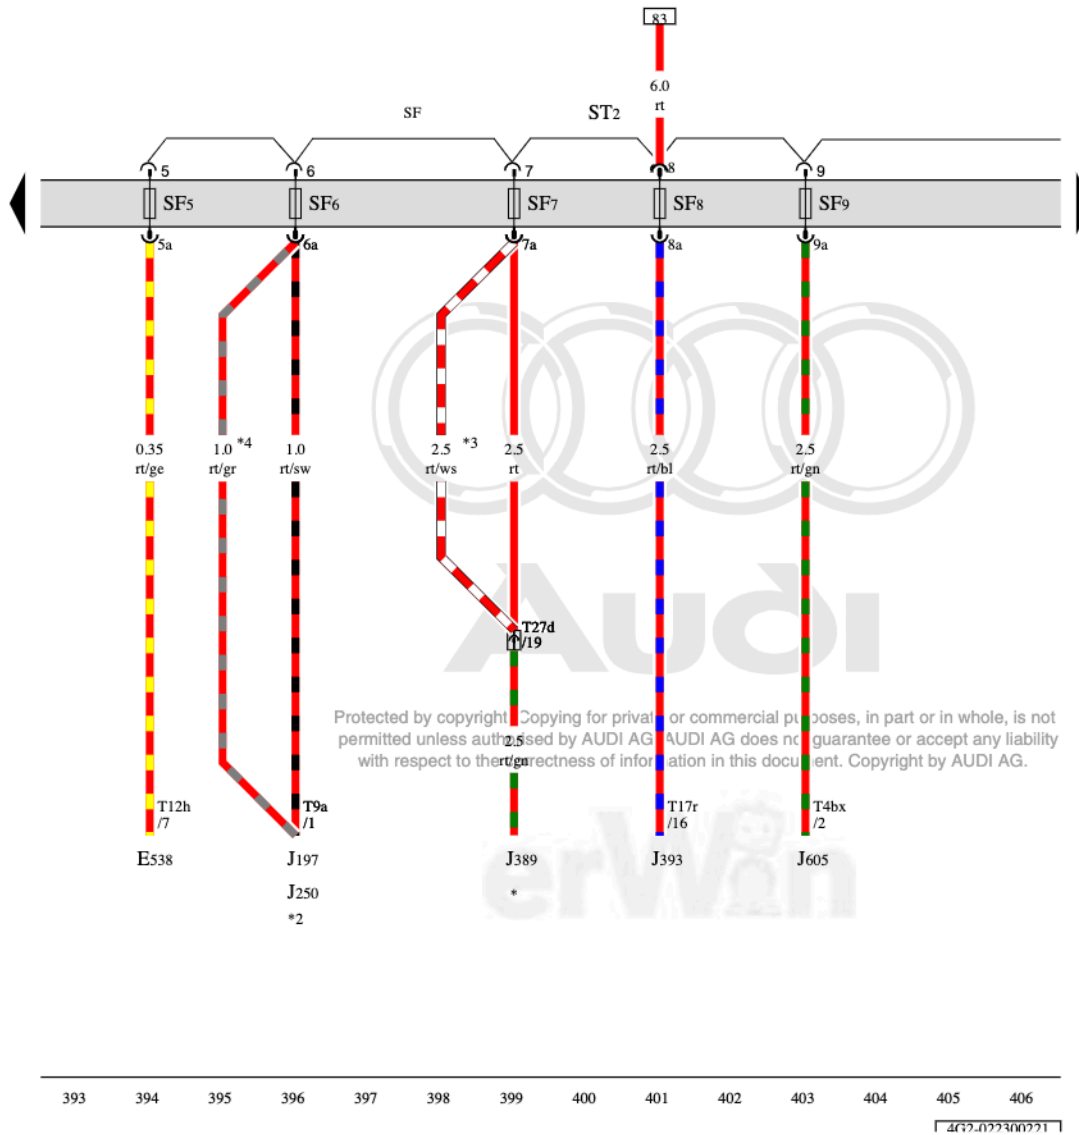

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Fuse Panel F, Fuse Panel 2

- J787 Digital Sound System Control Module 2
- R86 Cellular Telephone Amplifier
- R126 Telephone Baseplate
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST2 Fuse Panel 2, Red
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T4az 4-Pin Connector
- T4y 4-Pin Connector
- T5g 5-Pin Connector
- T32f 32-Pin Connector
- * For Vehicles with Bang & Olufsen Sound System
- *2 Not for USA
- *3 For Vehicles with Cell Phone Preparation
- *4 For Vehicles with Bluetooth

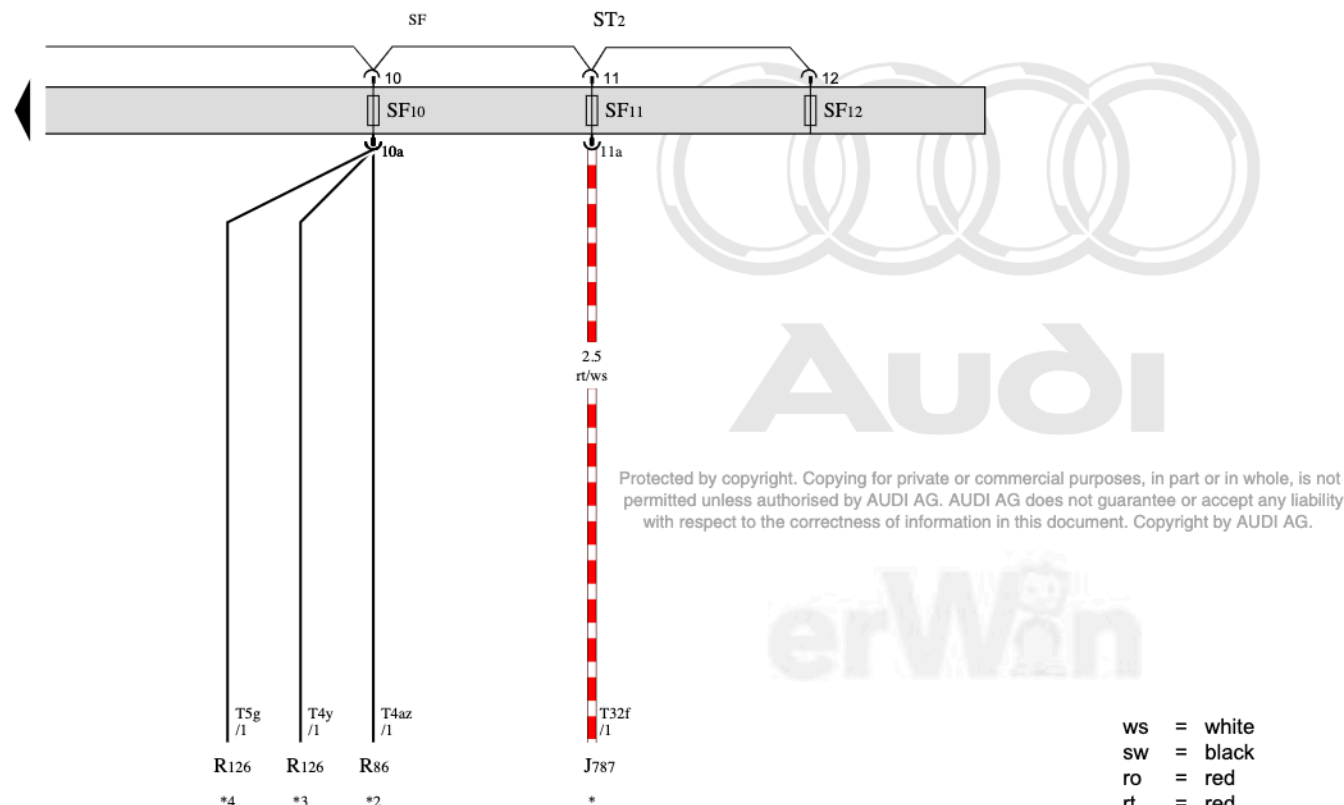

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Fuse Panel F, Fuse Panel 3


- J525 Digital Sound System Control Module
- J794 Information Electronics Control Module 1
- J880 Reducing Agent Metering System Control Module
- J909 Fuel Tank Leak Detection Control Module
- J931 Assembly Mount Control Module
- J937 Fan Activation Relay
- R Radio
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- ST3 Fuse Panel 3, Brown
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T3s 3-Pin Connector
- T8f 8-Pin Connector
- T10i 10-Pin Connector
- T38 38-Pin Connector

B300 Positive Connection 4 (30) (in Main Wiring Harness)

- * For USA Only
- *2 For Vehicles with Bose Sound System
- *3 For Vehicles with Bang & Olufsen Sound System
- *4 For Vehicles with Audi Sound System
- *5 Refer to Applicable Wiring Diagram
- *6 For Vehicles with Hybrid Drive
- *7 Refer to Applicable Engine Wiring Diagram
- *8 For Vehicles with 400 W Voltage Stabilizer
- *9 Depending on Equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

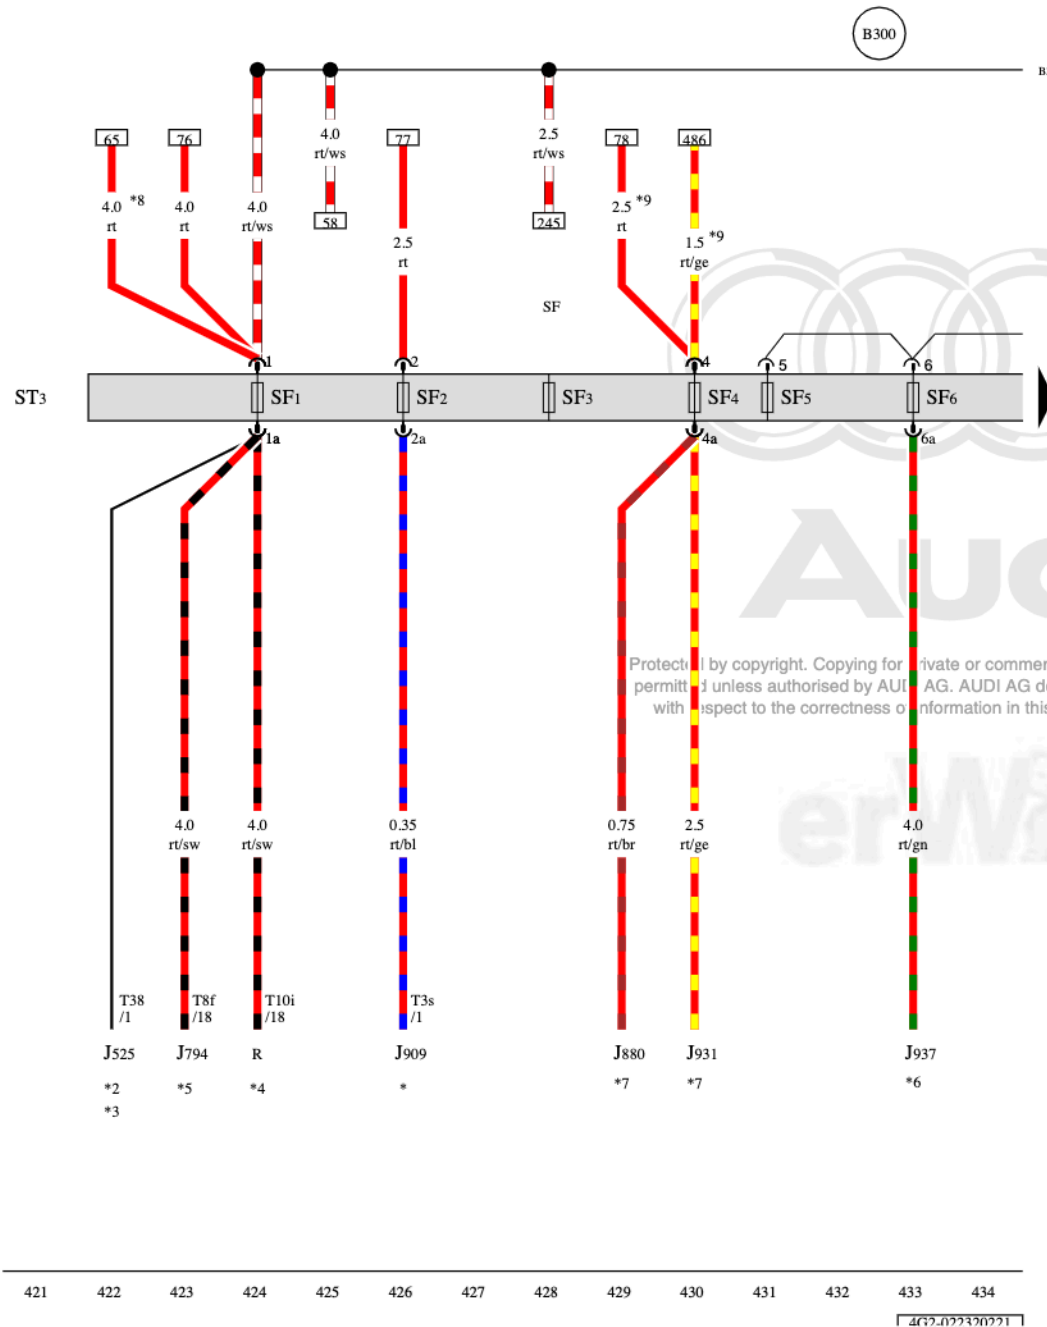

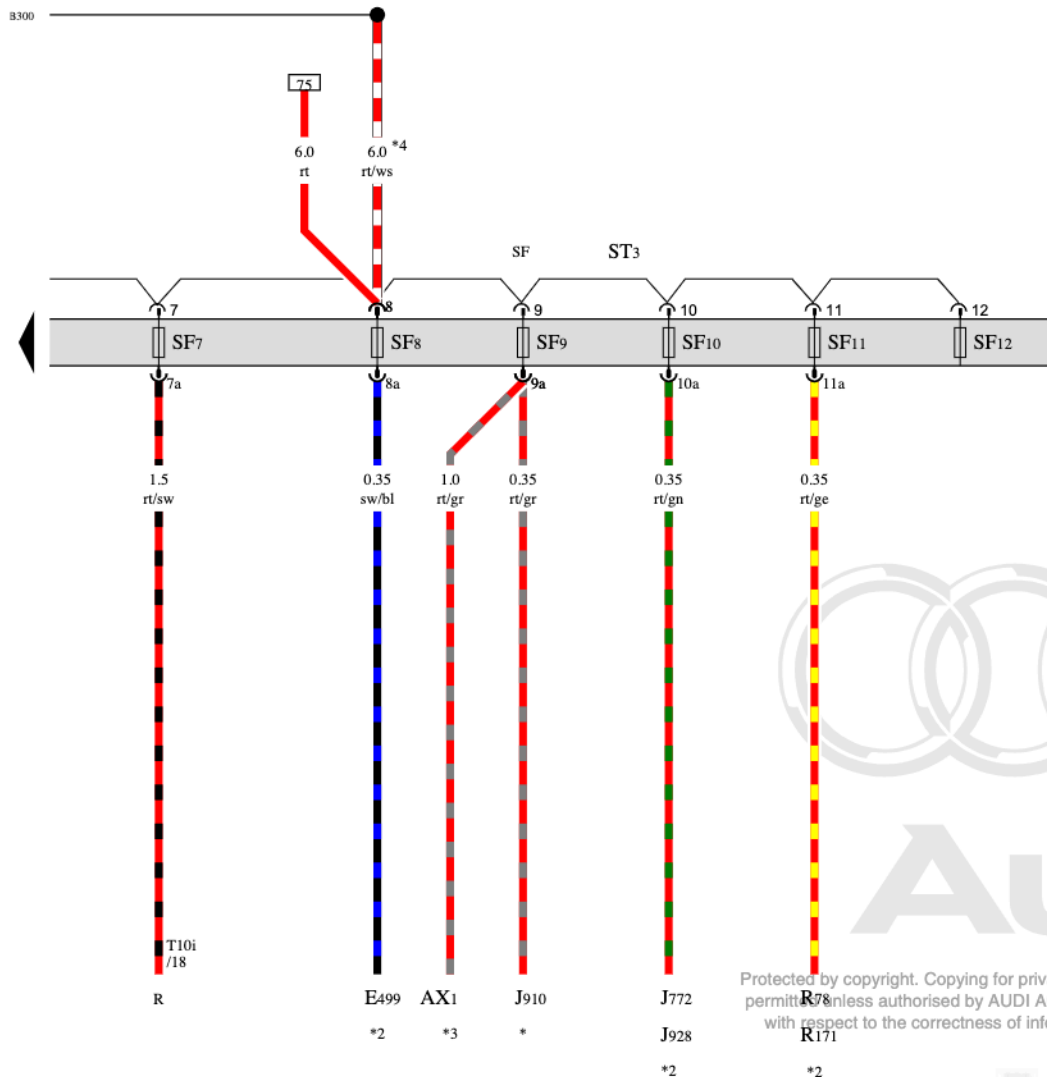

Fuse Panel F, Fuse Panel 3

- AX1 Hybrid Battery Unit
- E499 Multimedia Control Head 2
- J772 Rearview Camera System Control Module
- J910 Automatic Dimming Interior Rearview Mirror Relay
- J928 Peripheral Camera Control Module
- R Radio
- R78 TV Tuner
- R171 Digital TV Tuner
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- ST3 Fuse Panel 3, Brown
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- SF9 Fuse 9 (On Fuse Panel F)
- SF10 Fuse 10 (On Fuse Panel F)
- SF11 Fuse 11 (On Fuse Panel F)
- SF12 Fuse 12 (On Fuse Panel F)
- T10i 10-Pin Connector

B300 Positive Connection 4 (30) (in Main Wiring Harness)

- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 Depending on Equipment
- *3 For Vehicles with Hybrid Drive
- *4 For Vehicles with Start/Stop System

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the express written permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

435 436 437 438 439 440 441 442 443 444 445 446 447 448

449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500

Fuse Panel F, Fuse Panel 4


- G476 Clutch Position Sensor
- J197 Level Control System Control Module
- J250 Electronic Damping Control Module
- J393 Comfort System Central Control Module
- J446 Parking Aid Control Module
- J540 Electromechanical Parking Brake Control Module
- J587 Selector Lever Sensor System Control Module
- J791 Parallel Parking Assistance Control Module
- SF Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right
- SF1 Fuse 1 (On Fuse Panel F)
- SF2 Fuse 2 (On Fuse Panel F)
- SF3 Fuse 3 (On Fuse Panel F)
- SF4 Fuse 4 (On Fuse Panel F)
- ST4 Fuse Panel 4, Green
- SF5 Fuse 5 (On Fuse Panel F)
- SF6 Fuse 6 (On Fuse Panel F)
- T6ah 6-Pin Connector
- T9a 9-Pin Connector
- T16i 16-Pin Connector


B286 Positive Connection 10 (15a) (in Main Wiring Harness)

B470 Connection 6 (in Main Wiring Harness)

- * For Vehicles with Parallel Parking Assistance
- *2 For Vehicles with Park Distance Control (PDC)
- *3 Refer to Applicable Convenience System Wiring Diagram
- *4 Refer to Applicable Wiring Diagram for Automatic Transmission
- *5 Refer to Applicable Engine Wiring Diagram
- *6 Refer to the Applicable Multimedia System Wiring Diagram
- *7 Depending on Equipment
- *8 From June 2011

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

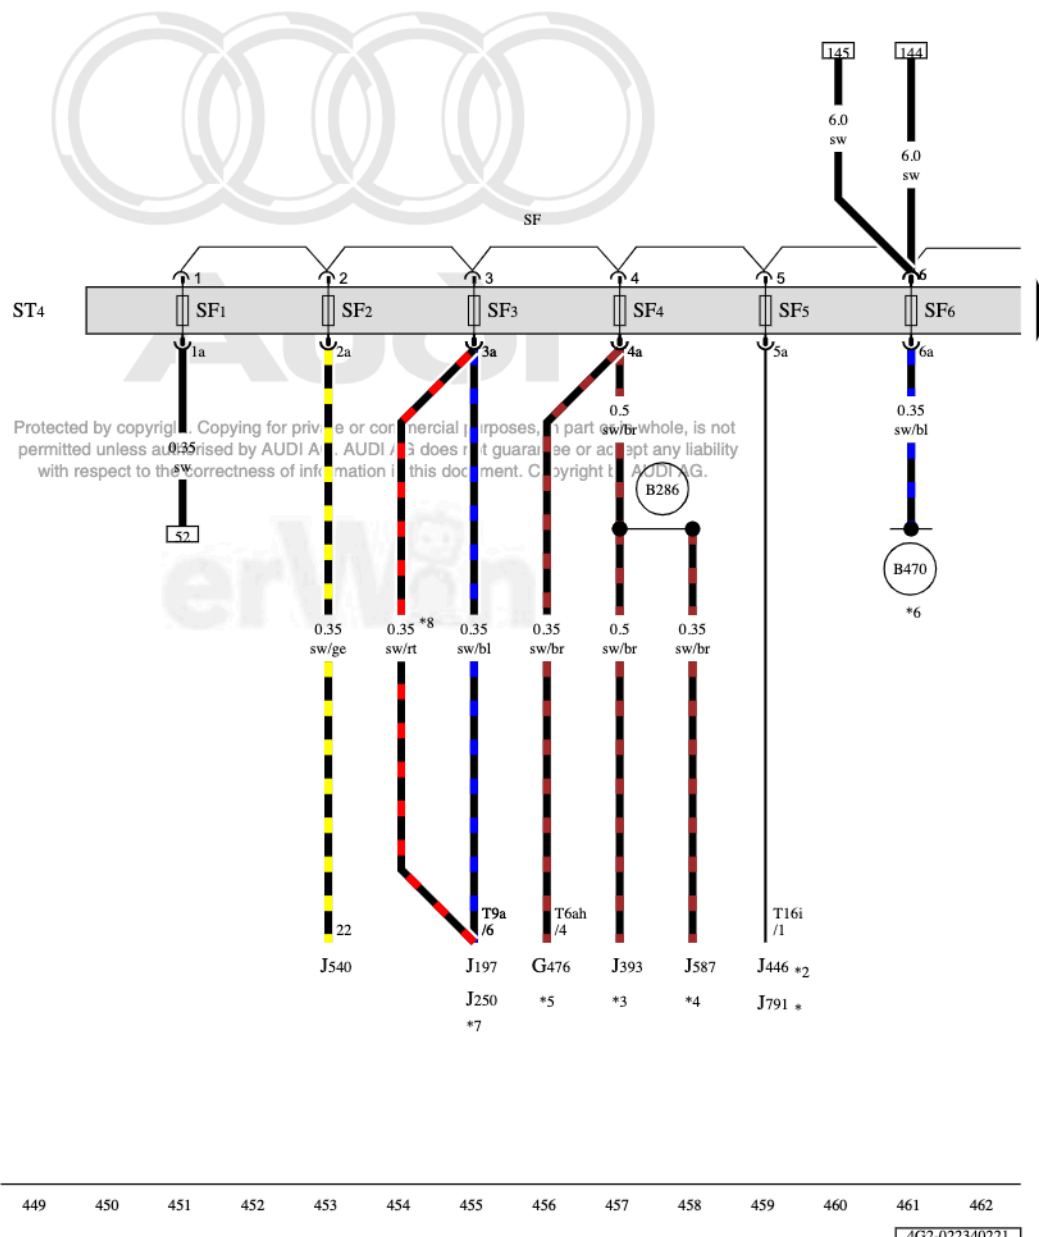

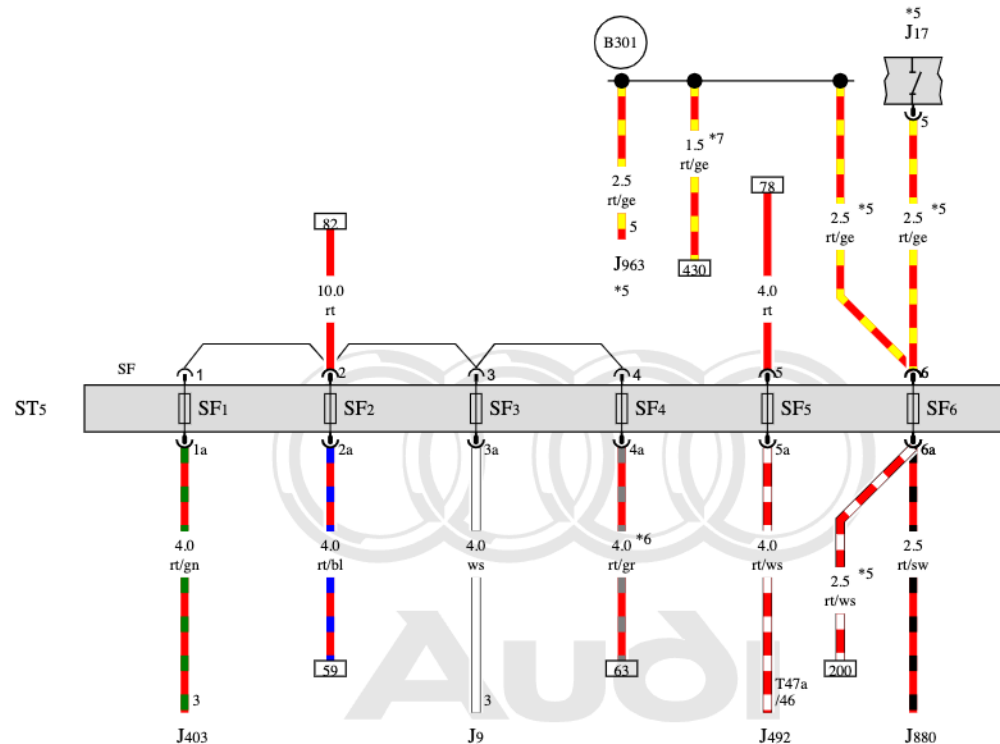

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse Panel F, Fuse Panel 5

- | | |
|------|---|
| J9 | Rear Window Defogger Relay |
| J17 | Fuel Pump Relay |
| J403 | Level Control System Compressor Relay |
| J492 | All-Wheel Drive Control Module |
| J880 | Reducing Agent Metering System Control Module |
| J963 | Reducing Agent Metering System Relay |
| SF | Fuse Panel F, On the Relay and Fuse Panel in the Luggage Compartment, Right |
| SF1 | Fuse 1 (On Fuse Panel F) |
| SF2 | Fuse 2 (On Fuse Panel F) |
| SF3 | Fuse 3 (On Fuse Panel F) |
| SF4 | Fuse 4 (On Fuse Panel F) |
| ST5 | Fuse Panel 5, Black |
| SF5 | Fuse 5 (On Fuse Panel F) |
| SF6 | Fuse 6 (On Fuse Panel F) |
| T47a | 47-Pin Connector |

- (B301) Positive Connection 5 (30) (in Main Wiring Harness)

- * For AWD Vehicles
- *2 Refer to Applicable Standard Equipment Wiring Diagram
- *3 For Vehicles with Level Control System
- *4 Refer to Applicable Wiring Diagram
- *5 Refer to Applicable Engine Wiring Diagram
- *6 For Vehicles with 400 W Voltage Stabilizer
- *7 Depending on Equipment

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink